

(2)

AD-A182 064

OTIC FILE COPY

AFWAL-TR-86-4006 Volume VII Part 2



INTEGRATED INFORMATION
SUPPORT SYSTEM (IISS)
Volume VII - Communications Subsystem
Part 2 - Generic COMM and VAX IHC Product Specification

General Electric Company Production Resources Consulting One River Road Schenectady, New York 12345



Final Report for Period 22 September 1980 - 31 July 1985 November 1985

Approved for public release; distribution is unlimited.

PREPARED FOR:

MATERIALS LABORATORY
AIR FORCE WRIGHT AERONAUTICAL LABORATORIES
AIR FORCE SYSTEMS COMMAND
WRIGHT-PATTERSON AFB, OH 45433-6533

NOTICE

When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility nor any obligation whatsoever; and the fact that the government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use, or sell any patented invention that may in any way be related thereto.

This report has been reviewed by the Office of Public Affairs (ASD/PA) and is releasable to the National Technical Information Service (NTIS). At NTIS, it will be available to the general public, including foreign nations.

This technical report/has been reviewed and is approved for publication.

DAVID L. JUDION, PROJECT MANAGER

AFWALMLTC!

WRIGHT PATTERSON AFB OH 45433

5 lug 1986

FOR THE COMMANDER:

GERALD C. SHUMAKER, BRANCH CHIEF

AFWAL/MLTC

WRIGHT PATTERSON AFB OH 45433

1 Aug 86

"If your address has changed, if you wish to be removed from our mailing list, or if the addressee is no longer employed by your organization please notify AFWAL/MLTC, W-PAFB, OH 45433 to help us maintain a current mailing list."

Copies of this report should not be returned unless return is required by security considerations contractual obligations, or notice on a specific document.

	Onclassi						: Nov	ember 19
MEURITY	CLASS FIGAT	104 01 74	# *A Q L					
1				REPORT DOCUM			4182	2 600
14 44 704	Daclass:		AT-10W		10 RESTRICTIVE N	iarcings		
SF BEENW	ITY CLASSIFI	CATION A	V TIRONTY		3 DISTRIBUTION:4	VAILABILITY C	FREPORT	
20 DECLA	SIFICATION	/DOWNGR	ADING SCHE	out.		for public lice is wall		
4. PERFOR	WING ORGAI	HEATION	REPORT NUM	88 A (B)	S. MONITORING OR	GANIZATION A	EPORT NUMBER	(6)
					AFVAL-TR-	84-4004 Vo	1 VII. Part	2
SE NAME	of Perform	ING DRGA	MIZATION	BL OFFICE SYMBOL	74 NAME OF MONT	PORING DAGAN	IZATION	
General Produc	l Electric tion Beson	Compan roes Co	y asulting		AFVAL/NLT	C		
OL ADDRE	88 (City, Swa	and Ell Co	riio i		76. ADDRESS (City.	San end EU Con	401	
	iver Road enectedy,		45		VPAPB, OK	45433-6533		
	DF FUNDING/	BPONS OR:	MB	D. OFFICE SYMBOL	B. PROCUREMENT	METRUMENT ID	ENTIFICATION	NUMBER
Mate	vization Prials Labor Force Syste		M. USAF	AFVAL/MLTC	733615-80	D-C-\$185	•	
	35 (City, State				10 SOURCE OF FU	DING NOS		
ALIE	l-Palters	 AFB.	Ch io 45 43	iS	Program Blement Mo.	PROJECT MG.	TASK MO.	WORK UNIT
	incide forum See Rovers	•	Megn)		78 011F	7500	62	01
	HAL AUTHOR						<u> </u>	
	OF ABPORT		130 TIME C	OVERED 1000 - 31 July 1005	14. DATE OF REPO!		/ 15. PABE	
	Pechaical Re		1 22 2071	The computer sof	L			
10	AN Project	L Priori	ty 63 01	references that computer softwar	in no way refle	ect Air For	os-owned or	-developed
17	COSATI	CODES		18. SUBJECT TERMS IC	-	-	ify by black numb	971
1308	G#0# D905	- <u></u>	9 GR.					
1300	5505							
18 ABSTR	467 (Cantinus	-	4	I den hij by block number	21	_		
				es the Produc	nt Specific	ation for	the	
	Commun	icatio	ons Subs	vstem (COMM)	configurat	ion item	of the	
	Integr	ated 1	Informat	ion Support S	System (IIS:	S) Test B	led.	
	The Te	st Bed	i is an	integrated hategrated Comp	rdware/soft	ware env	ironment	
	(ICAM)	Progi	ram appl	ications will	function (cooperati	vely.	
	1 .	~		ost)	•	-	
			-					
	BUTION/AVA			•	21 ABSTRACT BECU		CATION	
	PIED/WILIMI	TED 🎏 84	AME AS RPT.	DI STIC USERS D	Unclassi	Tied		

DO FORM 1473, 83 APR

22. HAME OF RESPONSIBLE INDIVIDUAL

David L. Judson

EDITION OF 1 JAN 73 IS OBSOLETS.

813-255-6076

Unclassified

22: OFFICE STMBDL

ATVAL/KLTC

11. Title

Integrated Information Support System (IISS)
Vol VII - Communications Subsystem
Part 2 - Generic COMM and VAX IHC Product Specification

Accesion For	
NTIS CRA&I DTIC TAB Unannounced Unitarcation	
By Ditibution/	
Availability	Codes
Dist Spec	



PREFACE

This product specification covers the work performed under Air Force Contract F33615-80-C-5155 (ICAM Project 6201). This contract is sponsored by the Materials Laboratory, Air Force Systems Command, Wright-Patterson Air Force Base, Ohio. It was administered under the technical direction of Mr. Gerald C. Shumaker, ICAM Program Manager, Manufacturing Technology Division, through Project Manager, Mr. David Judson. The Prime Contractor was Production Resources Consulting of the General Electric Company, Schenectady, New York, under the direction of Mr. Alan Rubenstein. The General Electric Project Manager was Mr. Myron Hurlbut of Industrial Automation Systems Department, Albany New York.

Certain work aimed at improving Test Bed Technology has been performed by other contracts with Project 6201 performing integrating functions. This work consisted of enhancements to Test Bed software and establishment and operation of Test Bed hardware and communications for developers and other users. Documentation relating to the Test Bed from all of these contractors and projects have been integrated under Project 6201 for publication and treatment as an integrated set of documents. The particular contributors to each document are noted on the Report Documentation Page (DD1473). A listing and description of the entire project documentation system and how they are related is contained in document FTR620100001, Project Overview.

The subcontractors and their contributing activities were as follows:

TASK 4.2

Subcontractors	Role
Boeing Military Aircraft Company (BMAC)	Reviewer.
D. Appleton Company (DACOM)	Responsible for IDEF support, state-of-the-art literature search.
General Dynamics/ Ft. Worth	Responsible for factory view function and information models.

Subcontractors

Role

Illinois Institute of Technology

Responsible for factory view function research (IITRI) and information models of small and medium-size business.

North American Rockwell

Reviewer.

Northrop Corporation

Responsible for factory view function and information models.

Pritsker and Associates

Responsible for IDEF2 support.

SofTech

Responsible for IDEFO support.

TASKS 4.3 - 4.9 (TEST BED)

Subcontractors

Role

Boeing Military Aircraft Company (BMAC)

Responsible for consultation on applications of the technology and on IBM computer technology.

Computer Technology Associates (CTA)

Assisted in the areas of communications systems, system design and integration methodology, and design of the Network Transaction Manager.

Control Data Corporation (CDC)

Responsible for the Common Data Model (CDM) implementation and part of the CDM design (shared with DACOM).

D. Appleton Company (DACOM)

Responsible for the overall CDM Subsystem design integration and test plan, as well as part of the design of the CDM (shared with CDC). DACOM also developed the Integration Methodology and did the schema mappings for the Application Subsystems.

Subcontractors	Role
Digital Equipment Corporation (DEC)	Consulting and support of the performance testing and on DEC software and computer systems operation.
McDonnell Douglas Automation Company (McAuto)	Responsible for the support and enhancements to the Network Transaction Manager Subsystem during 1984/1985 period.
On-Line Software International (OSI)	Responsible for programming the Communications Subsystem on the IBM and for consulting on the IBM.
Rath and Strong Systems Products (RSSP) (In 1985 became McCormack & Dodge)	Responsible for assistance in the implementation and use of the MRP II package (PIOS) that they supplied.
SofTech, Inc.	Responsible for the design and implementation of the Network Transaction Manager (NTM) in 1981/1984 period.
Software Performance Engineering (SPE)	Responsible for directing the work on performance evaluation and analysis.
Structural Dynamics Research Corporation (SDRC)	Responsible for the User Interface and Virtual Terminal Interface Subsystems.
A15	

Other prime contractors under other projects who have contributed to Test Bed Technology, their contributing activities and responsible projects are as follows:

Contractors	ICAM Project	Contributing Activities
Boeing Military Aircraft Company (BMAC)	1701, 2201, 2202	Enhancements for IBM node use. Technology Transfer to Integrated Sheet Metal Center (ISMC).

Contractors	ICAM Project	Contributing Activities
Control Data Corporation (CDC)	1502, 1701	IISS enhancements to Common Data Model Processor (CDMP).
D. Appleton Company (DACOM)	1502	IISS enhancements to Integration Methodology.
General Electric	1502	Operation of the Test Bed and communications equipment.
Hughes Aircraft Company (HAC)	1701	Test Bed enhancements.
Structural Dynamics Research Corporation (SDRC)	1502, 1701, 1703	IISS enhancements to User Interface/Virtual Terminal Interface (UI/VTI).
Systran	1502	Test Bed enhancements. Operation of Test Bed.

TABLE OF CONTENTS

		<u>1</u>	Page
SECTION	1.0	SCOPE	1-1
	1.1	Identification	1-1
	1.2	Functional Summary	1-1
SECTION	2.0	DOCUMENTS	2-1
	2.1	Reference Documents	2-1
	2.2	Terms and Abbreviations	2-2
SECTION	3.0	REQUIREMENTS	3-1
	3.1	Structural Descriptions	3-1
	3.2	Functional Flow Description	3-1
	3.3	Interfaces	
	3.4	Program Interrupts	3-3
	3.5	Timing and Sequence Description	3-3
	3.6	Special Control Features	
	3.7	Storage Allocation	
	3.7.1	Data Base Definition	3-4
	3.7.1.1	File Description	3-4
	3.7.1.2	Table Description	3-4
	3.7.1.3	Item and Constant Description	3-4
	3.7.2	CPC Relationship	3-5
	3.8	Object Code Creation	3-6
	3.9	Adaption Data	3-6
	3.10	Detail Design Description	3-7
	3.10.1	Main Program List	
	3.10.2	Module List	
	3.10.3	External Routines List	
	3.10.4	Include File List	
	3.10.5	Where Include File Used List	
	3.10.6	Where External Routine Used List	
	3.10.7	Main Program Parts List	
	3.10.8	Module Documentation	
	3.10.9	Include File Descriptions	
	3.10.10	Hierarchy Chart	
	3.11	Program Listings Comments	3-180
SECTION		QUALITY ASSURANCE PROVISIONS	
	4.1	Introduction and Definitions	4-1
	4.2	Computer Programming Test and	
		Evaluation	4-1

SECTION 1

SCOPE

1.1 Identification

This specification establishes the 'as built' design of the Communications Subsystem.

1.2 Functional Summary

The Communications Subsystem provides the mechanism for transporting messages between:

- (1) Two computers running the Integrated Information Support System
- (2) Two processes running under the Integrated Information Support System

The portion that performs the first function is referred to as COMM; the second function is performed by a set of routines that is referred to as the Interprocess Communication Primitives or IPC's.

COMM uses asynchronous lines to support the transmission of messages between two computers. The communications protocol used across the lines is contention until a session is started at which time it switches to half duplex, interleaved, bidirectional message transmissions. COMM will deliver messages to its peer on the remote computer in the order in which they are received from the Network Transaction Manager. Messages may be variable in length. If the message is larger that a transmission block, COMM will segment the message and reassemble it at the receiving end. If the message is smaller than a transmission block, COMM will transmit only the message plus seven (7) characters. A longitudinal redundancy check is applied to each message to maintain message integrity. Messages are given a sequence number to ensure no messages are lost. Transmission failures or receiving a non-acknowledgment will result in the retransmission of the message. If either or both of these conditions occur consecutively for a specified number of times, the link between the two computers is assumed to be down and is reported to the Network Transaction Manager as such. Random unsuccessful transmissions or receptions of a message are logged as recoverable errors.

COMM never terminates because of the status of the link to the other computer. It will terminate only if it receives an illegal command from the Network Transaction Manager or if it fails to initialize the asychronous line (terminal port) on start-up.

Messages must be classified as containing either binary data or native data. Binary data is converted to the native data representation of each nibble (4 bits) for transmission, then converted back to binary for delivery of the message at the receiving end. There is no translation of native data except for control characters. Control characters can be used in native data messages in which case they are translated to two characters for transmission. The two characters are a special character to indicate special processing is required on the following character and a character that indicates which control character. The special character is the exclamation mark (!)

Translation between EBCDIC and ASCII, necessary to support communications between the IBM and non-IBM environments, is performed by a hardware protocol converter.

The configuration of the network is point-to-point; therefore, there is a COMM process running on each computer for each remote computer in the Integrated Information Support System.

SECTION 2

DOCUMENTS

2.1 Reference Documents

The following pertinent reference materials are available at the ICAM Program Office.

- 1. Interim Reports
- 2. Life Cycle Documents
 - (a) ITR620150002U Project Scope
 - (b) PMP620150000 Master Plan and Schedule
 - (c) SAD620150000 State-of-the-art Review
 - (d) SRD620140000 System Requirements Document
 - (e) SDS620140000 System Design Specifications
 - (f) DS6201430000 Development Specification Communications Subsystem

The following reference materials are available from Digital Equipment Corporation.

- (a) $\frac{VAX/VMS}{AA-M540B-TE}$ $\frac{I/O}{DS-TE}$ $\frac{User's}{DS-TE}$ Guide (Volume 1), Order No.
- (b) VAX/VMS I/O User's Guide (Volume 2), Order No. AA-M541B-TE
- (c) <u>VAX COBOL Language Reference Manual</u>, Order No. AA-H631C-TE
- (d) VAX-11 FORTRAN Language Reference Manual, Order No. AA-DO34C-TE

Other reference materials are as follows.

- (a) International Organization for Standardization, Open Systems Interconnection, <u>Information Processing Systems Basic Reference Model</u>, TC 97/16 N 719
- (b) International Organization for Standardization,
 Open Systems Interconnection, Draft Connection-Oriented Transport Service Definition
 TC 97/16 N 860
- (c) International Organization for Standardization, Open Systems Interconnection, Draft -

- Connection-Oriented Transport Protocol Specification Version 1.2, TC 97/16 N 861
- (d) International Organization for Standardization, Open Systems Interconnection, Draft Connection-Oriented Session Protocol Definition TC 97/16 N 856
- (e) National Bureau of Standards, Specification of the Transport Protocol, Volume 2: <u>Basic Class Protocol</u>, <u>Draft Report</u>, September 1981, Report No. ICST/HLNP-81-12
- (f) National Bureau of Standards, Specification of the Transport Protocol, Volume 3: Extended Class Protocol, Draft Report, September 1981, Report No. ICST/HLNP-81-13
- (g) National Bureau of Standards, Specification of the Transport Protocol, Volume 4: Network

 Interfaces, Draft Report, September 1981, Report
 No. ICST/HLNP-81-14

2.2 Terms And Abbreviations

- 1. Longitudinal Redundancy Check The summation of all the bytes in a message. It becomes three bytes that are attached to the end of the message to ensure its integrity.
- 2. <u>Interhost Communication Primitives (IHC's)</u> A set of routines used by COMM to interface to the operating system and the terminal driver. They are always system dependent.
- 3. <u>Interprocess Communication Primitives (IPC's)</u> A set of routines used to communicate between two processes on the same computer. They are always system dependent.

SECTION 3

REQUIREMENTS

3.1 Structural Descriptions

The overall structure of COMM is similar to that of a device driver. It runs asynchronously in response to interrupts. After COMM is initialized, it waits to receive a message, either from the Network Transaction Manager or from COMM on the remote computer.

The four (4) top level components of COMM process its four possible states.

- (1) Session Inactive (ACTSES)
- (2) Session Active, Line Idle (IDLINE)
- (3) Session Active, Line Bid (LBRESP)
- (4) Session Active, Line Active (ALINPS)

See the hierarchy charts in Section 3.10.10 for the complete structure of COMM.

3.2 Functional Flow Description

In each of the four states, COMM performs different activities. In state one (Session Inactive), COMM is waiting for the Network Transaction Manager to send a control message requesting that a connection be made to COMM on the remote computer. While in state one, all messages for COMM from the remote computer are ignored.

Upon receiving the "start link" message from the Network Transaction Manager and the correct response for COMM on the remote computer, COMM moves to the second state (Session Active, Line Idle). In state two, COMM is waiting for:

- (1) A message from the Network Transaction Manager that must be sent to its peer process on the remote computer or a control message to shutdown, or
- (2) A Line Bid from COMM on the remote computer indicating it has at least one message from its Network Transaction Manager that must be sent.

If a message is received from the Network Transaction

Manager for transmission to it peer process on the remote computer, COMM moves to the third state (Session Acive, Line Bid) and transmits a line bid to COMM on the remote computer. When the acknowledgment for the line bid is received from the remote computer, COMM's state changes to four (Session Active, Line Active).

In state four, messages are received and transmitted in a bidirectional, half duplex, interleaved mode until neither COMM program has a message to send. At this time the master for that session sends an End Of Transmission (EOT) message and both COMM's return to state two (Session Active, Line Idle).

If, while in state two, COMM receives a Line Bid request from the remote COMM, it transmits an acknowledgment and moves to state four to receive messages from the remote computer and transmit any message it receives from the Network Transaction Manager during this session.

If there is a collision of Line Bid requests, both COMM's apply a backoff algorithm so that one COMM will retransmit the Line Bid ahead of the other.

If the transmission is lost (no response from the remote computer over a period of time during which several retransmissions are made), COMM reverts to state one (Session Inactive) and sends a message to the Network Transaction Manager indicating that the link has failed.

3.3 Interfaces

COMM communicates with only one process, the Network Transaction Manager, from which it receives control directions and messages to be sent to the remote computer. In turn, COMM sends the NTM messages received from the remote computer and the status of the communications line. The interface between COMM and the Network Transaction Manager is performed by the Interprocess Communication Primitives (IPC's).

Communications with the remote computer is accomplished through the terminal drivers for the respective computers. The interface to each terminal driver is through a set of routines referred to as the Interhost Communication Primitives (IHC's). Section 3.2.6 of the Communication Subsystem Development Specification presents detailed descriptions of each IHC, its inputs and its outputs.

3.4 Program Interrupts

As mentioned previously, COMM is interrupt driven with interrupts coming either from the IPC's on behalf of the Network Transaction Manager or from the IHC's on behalf on the operating system terminal driver that has received a message from COMM on the remote computer. Waiting for these interrupts is performed by one of the IPC wait primitives. If a response must be received within a particular time interval, the IPC's associated with timing are used along with one of the wait's.

3.5 Timing And Sequence Description

Timing and sequencing is relevant to COMM only after a Line Bid has been received from COMM on the remote computer. At this time, the half duplex, bidirectional, interleaved message transmission protocol begins between the two COMM's. Messages must be received from the remote COMM, processed to determine if the message should be ack'ed or nack'ed, and sent on to the Network Transaction Manager if complete. Also, messages from the Network Transaction Manager must be received, prepared for transmission and built into a message with the status of the message received from the remote COMM. Finally, the message must be sent to the remote COMM before it decides that its message must have been lost and retransmits it. Although retranmissions are processed correctly by the receiving COMM, for performance reasons it is better that this situation not occur.

All this timing and sequencing activity occurs in state four (Session Active, Line Active) and is under the control of the computer program component Active Line Response (ALRESP). The primary CPC's used to perform the work are

- (1) Process Input Message, If Present (PINPMS)
- (2) Process Output Message (POUTMS)
- (3) Complete and Transmit Message (KPLXMT)

3.6 Special Control Features

The Communications Subsystem does not include any special control features as defined in the ICAM Documentation Standards manual.

3.7 Storage Allocation

3.7.1 Data Base Definition

3.7.1.1 File Description

COMM does not use files.

3.7.1.2 Table Description

COMM has a set of tables used fortransformations needed to successfully transmit messages containing control characters and a set of tables to calculate the longitudinal redundancy check in both the ASCII and EBCDIC environments. Both sets of tables are described in the Communications Subsystem Development Specification manual, Section 3.2.1.4, Interface Between IBM and non-IBM Computers.

3.7.1.3 Item and Constant Description

The format of the message transmitted between the two COMM's is also described in the DS, section 3.2.2, Message Format.

There are also a set of constants referred to as the COMM system parameters. They are

• COMM CONFIGURATION PARAMETERS

Ol FLAGS.

O3 PRIMARY PIC X.

O3 MAX-RETRY PIC 99 VALUE 3.

TIME INTERVAL SETTINGS

03 MASTER-TIME PIC 9(6) VALUE 15.
03 SLAVE-TIME PIC 9(6) VALUE 135.
03 PRIMARY-CONTENTION-TIME PIC 9(6) VALUE 5.
03 SESSION-NOT-ACTIVE-RESP-TIME PIC 9(6) VALUE 300.

SYMBOLS INDICATING IISS COMPUTERS

O3 HOST-COMPUTER PIC X.
O3 TARGET-COMPUTER PIC X.

* BUFFER SIZES

O1 MAILBOX-MAX-BUFFER-SIZE PIC 9(4) VALUE 2000. O1 LAN-MAX-BUFFER-SIZE PIC 9(4) VALUE 253.

TERMINAL DESIGNATOR

01 PORT-NAME PIC X(12).

3.7.2 CPC Relationship

The items and constants listed in section 3.7.1.3 are used throughout COMM as a basis for decision making. The tables, however, are used only in specific CPC's that perform transformations. The table to process control characters in messages received from the remote COMM is used in KMINDA, the routine that compresses the data in the receiving buffer. The table exists in the include file CTLASC.INC for the non-IBM environment and CTLEBC.INC for the IBM computers. The table that is used in the longitudinal redundancy check calculation and to transform control characters for transmission is referenced in two routines: EXOUDA, Expand NTM Data, and KLCLRC, Calculate Longitudinal Redundancy Check. The table exists in the include file ASCII.INC for the non-IBM environment and in

EBCDIC.INC for IBM computers.

3.8 Object Code Creation

The generic portion of COMM is written in COBOL and has been successfully compiled on a VAX 11/780 under VMS, an IBM 3084 under MVS, and a Honeywell Level 6 under Mod 400.

The IHC's are routines that interface to the operating system of a particular computer. On the VAX they are written in COBOL and FORTRAN. On the IBM, they are written in Assembler. On the Honeywell Level 6, they are written in COBOL and Assembler. The IPC's are also routines that interface to the operating system. They are written in the same languages as the IHC's.

The minimum computer hardware and software required to create and run COMM in the IISS environment is documented in the Installation Guide for IISS on the VAX and in the Installation Guide for IISS on the IBM.

3.9 Adaption Data

In order to tailor COMM to either the VAX or the IBM, there are a few system dependent files required. For example, the tables for control character processing and calculation of the longitudinal redundancy check depend upon whether the native character set is ASCII or EBCDIC.

The other location for adaption data in COMM is in the initialization subroutine. The subroutine is tailored with initalization data for a specific terminal port; thus, there is one for each remote computer. This limitation could be removed with the implementation of system data storage in the Common Data Model.

The command procedures to the create COMM executable and the IPC library are specific to each computer and can be found under Software Configuration Management.

3.10 Detail Design Description

The upcoming program details were derived from all modules that were selected when the following Documentation Group(s) was chosen:

COMMVAX

3.10.1 Main Program List

The following is a list of all "Main Programs" which are modules that are not called by any other module being documented here. These modules are either program entry points or, if they are hooked into another set of programs via subroutine calls, they are the points the external programs can call and therefore enter through. To differentiate between the two types of entry points, look at the individual Module Documentation (section 3.10.8) and look at Module Type for each of the Main Program modules listed. Note whether the routine is a Program, Subroutine, or Function. If it is a Program, it is truly a main program entry point. If not, then it is merely called by other programs not being documented here.

COMM Main Program List

Module Name Purpose

CONVH MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

CONVI MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

3.10.2 Module List

The following is a list of all the modules being documented here along with their purpose. Each module has a unique name, no matter what language it was written in.

COMM Module List

Module Name	Purpose
ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
CNLTRM	CANCEL TERMINAL IO
СОИЛН	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
CONVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
DACSES	REPORT A SESSION FAILURE TO NTM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
INITRM	INITIALIZE THE TERMINAL LINE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KLCLRC	CALCULATE LONGITUDINAL REDUNDANCY CHECK
KMINDA	COMPRESS THE DATA IN THE RECEIVE BUFFER
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN

COMM Module List

Module Name	Purpose
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PARITY	SET CHANNEL TO EVEN PARITY
PINPMS	PROCESS MESSAGE FROM OTHER COMM
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER
PURGE	CLEAR THE TYPE AHEAD BUFFER
RCV5H	RECEIVE 5 CURSORS FROM THE IBM
RCVIBM	READ TERMINAL LINE FROM PROTOCOL CONVERTER **
RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
RCVTRM	READ TERMINAL LINE WITH EVENT FLAG
REPTER	REPORT RECOVERABLE ERROR TO NTM
SCTLMS	REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM
SETCHR	SET TERMINAL CHARACTERISTICS
SETSPD	INITIALIZE THE TERMINAL SPEED
STRTIM	SET APPROPRIATE TIME INTERVAL AND START TIMER
TRCVH1	TEST 1ST BYTE IN HEADER OF RECEIVED MSG

COMM Module List

Module Name	Purpose

TRCVH2 TEST 2ND BYTE IN HEADER OF RECEIVED MSG

TRMLAN RELEASE THE PORT TO THE LAN

UDRSQN UPDATE RECEIVE SEQUENCE NUMBER

UDXSQN UPDATE TRANSMIT SEQUENCE NUMBER

WIRESP WAIT FOR THE FIRST MESSAGE ON THE LAN

XMTLAN TRANSMIT TO A LAN TERMINAL LINE

XMTMSG TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

XMTTRM TRANSMIT TO THE TERMINAL LINE

3.10.3 External Routines List

The following is a list of all routines or functions not documented here that are called by modules that are documented here. The first caller, in alphabetical order, is listed as well. The specification in which any module is documented may be found in the Module Documentation Index (Document Number CM 620100001). See section 3.10.6 for a list of the modules that call each of these external routines.

COMM External Routines List

Module Name	First User
CNLTIM	ALINPS
DELMBX	COMVI
ERRPRO	INTVI
FREVTF	CNLLAN
GETMSG	GOUTMS
INICOM	INTVI
Instac	SCTLMS
LIB\$GET_EF	RCVTRM
RCVMSG -	INTVH
RELEVB	COMVI
SETTIM	PINPMS
SNDMSG	PINPMS
SYS\$ALLOC	INITRM
SYS\$ASSIGN	INITRM
SYS\$CANCEL	CNLTRM
SYS\$QIO	RCVIBM
SYS\$QIOW	XMTTRM
SYS\$SETPRI	RCVTRM
TRMNAX	COMVH
WAITO1	ACTSES
WAITO2	LBRESP
WAITO3	IDLINE

3.10.4 Include File List

The following is a list of all include files called in by modules being documented here. Each include file has a unique name regardless of the language being used. The purpose of each include file is listed as well. A more complete description of each include file is given in section 3.10.9. The purpose listed is the one that is in the source code of the include file.

A purpose of "**** PURPOSE NOT FOUND BY STRIPPER ****"
indicates that a purpose statement was not written into the
include file itself. The most common reason for this is that
the include file comes from system libraries that were not
developed by the project, such as 'C' libraries that are
provided with the 'C' compiler.

See section 3.10.6 for a set of lists which show all the modules which call in each of these include files.

COMM Include File List

File Name	Purpose
ASCII CANHDR CHKSTS COHCON	ASCII- INCLUDE FILE CHKSTS.INC CHECK STATUS CHKSTS.INC CHECK STATUS COMCON - INCLUDE FILE
COMFLG	COMFLG - INCLUDE FILE
CTLASC	CTLASC - INCLUDE FILE
ERRPRO	PROCESS ERROR INCLUDE FILE
ERRSTS	ERRSTS.INC IISS ERROR CODES
ERRSTS.INF	**** PURPOSE NOT FOUND BY STRIPPER ****
LANEVB	LANEVB.INC LAN TERMINAL EVENT BLOCK DESCRIPTION
nhsneb	NHSNEB - INCLUDE FILE
nlsneb	NLSNEB - INCLUDE FILE
NRCVEB	NRCVEB - INCLUDE FILE
NTMHDR	NTMHDR - INCLUDE FILE
NTMINB	NTMINB - INCLUDE FILE
NTMOUB	NTMOUB - INCLUDE FILE
RCVBLK	RCVBLK - INCLUDE FILE
RPTERR	**** PURPOSE NOT FOUND BY STRIPPER ****
TIMEVB	TIMEVB.INC TIME EVENT BLOCK DESCRIPTION
XMTBLK	XMTBLK - INCLUDE FILE

3.10.5 Where Include File Used List

The following lists each include file from 3.10.4 and all the modules documented in this specification which include them. The purpose of each module is listed as well.

Include	Module	Module
File	Name	Purpose

ASCII

EXOUDA EXPAND NTM DATA IF CONTROL CHARS OR BINARY KLCLRC CALCULATE LONGITUDINAL REDUNDANCY CHECK

CANHDR

SCTLMS REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM

CHKSTS

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
DACSES	REPORT A SESSION FAILURE TO NTM
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
	LINE
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PINPMS	PROCESS MESSAGE FROM OTHER COMM
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER
RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
REPTER	REPORT RECOVERABLE ERROR TO NTM
SCTLMS	REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM

Include	Module	Module
File	Name	Purpose
	STRTIM	SET APPROPRIATE TIME INTERVAL AND START TIMER
	WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
	XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
	XMTMSG	TRANSHIT MESSAGE TO COMM ON OTHER COMPUTER

COMCON

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMAI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
DACSES	REPORT A SESSION FAILURE TO NTM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KMINDA	
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	· · · · · · · · · · · · · · · · · · ·
LINBID	· · · · · · · · · · · · · · · · · · ·
PINPMS	PROCESS MESSAGE FROM OTHER COMM
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER
REPTER	REPORT RECOVERABLE ERROR TO NTM
STRTIM	SET APPROPRIATE TIME INTERVAL AND START TIMER
TRCVH1	TEST 1ST BYTE IN HEADER OF RECEIVED MSG
TRCVH2	
UDRSQN	UPDATE RECEIVE SEQUENCE NUMBER UPDATE TRANSMIT SEQUENCE NUMBER
	WAIT FOR THE FIRST MESSAGE ON THE LAN
XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

Include	Module	Module
File	Name	Purpose

COMFLG

ALINPS WAIT FOR INPUT FROM LAN OR TIMER RUNOUT ALRESP RESPOND TO MESSAGE FROM OTHER COMM COMVH MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM	
COMVH MAIN MODULE FOR COMMUNICATIONS SHRSYSTEM	
in ii ii iv iv	
COMVI MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM	
DACSES REPORT A SESSION FAILURE TO NTM	
EXOUDA EXPAND NTM DATA IF CONTROL CHARS OR BINA	RY
IDLINE PROCESS INPUT OR TIMER RUNOUT	
INTVH INITIALIZE COMM VARIABLES	
INTVI INITIALIZE COMM VARIABLES	
KLCLRC CALCULATE LONGITUDINAL REDUNDANCY CHECK	
KMINDA COMPRESS THE DATA IN THE RECEIVE BUFFER	
KPLXMT PUT FINISHING TOUCHES ON MESSAGE TO LAN	
LBRESP PROCESS RESPONSE TO LINE BID	
LINBID TRANSMIT A LINE BID MESSAGE	
PINPHS PROCESS MESSAGE FROM OTHER COMM	
POUTHS MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT	•
BUFFER	
RCVLAN RECEIVE FROM A LAN TERMINAL LINE	
REPTER REPORT RECOVERABLE ERROR TO NTM	
SCTLMS REPORT RECOVERABLE ERROR OR STATUS MSG	O
NTM	
STRTIM SET APPROPRIATE TIME INTERVAL AND START	
TIMER	
WIRESP WAIT FOR THE FIRST MESSAGE ON THE LAN	
XMTLAN TRANSMIT TO A LAN TERMINAL LINE	
XMTMSG TRANSMIT MESSAGE TO COMM ON OTHER COMPUT	ER

CTLASC

KMINDA COMPRESS THE DATA IN THE RECEIVE BUFFER

Include	Module	Module
File	Name	Purpose
~		

ERRPRO

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
DACSES	REPORT A SESSION FAILURE TO NTM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
	LINE
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PINPMS	PROCESS MESSAGE FROM OTHER COMM
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT
	BUFFER
RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
REPTER	REPORT RECOVERABLE ERROR TO NTM
SCTLMS	REPORT RECOVERABLE ERROR OR STATUS MSG TO
	NTM
STRTIM	SET APPROPRIATE TIME INTERVAL AND START
	TIMER
WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

ERRSTS

ACTSES ACTIVATE SESSION IF REQUESTED TO BY NTM

Include	Module	Module
File	Name	Purpose
	ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
	ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
	CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
	DACSES	REPORT A SESSION FAILURE TO NTM
	EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
	GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
		LINE
	GOUTMS	GET A MESSAGE FROM NTM
	IDLINE	PROCESS INPUT OR TIMER RUNOUT
	INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
	LBRESP	PROCESS RESPONSE TO LINE BID
	PINPMS	PROCESS MESSAGE FROM OTHER COMM
	POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT
		BUFFER
	RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
	REPTER	REPORT RECOVERABLE ERROR TO NTM
	TRCVH1	TEST 1ST BYTE IN HEADER OF RECEIVED MSG
	TRCVH2	TEST 2ND BYTE IN HEADER OF RECEIVED MSG
	WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
	XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
	XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

ERRSTS.INF

CNLTRM	CANCEL TERMINAL IO
INITRM	INITIALIZE THE TERMINAL LINE
PARITY	SET CHANNEL TO EVEN PARITY
PURGE	CLEAR THE TYPE AHEAD BUFFER
RCV5H	RECEIVE 5 CURSORS FROM THE IBM
RCVIBM	READ TERMINAL LINE FROM PROTOCOL
	CONVERTER **
RCVTRM	READ TERMINAL LINE WITH EVENT FLAG

Include File	Module Name	Module Purpose
		* * * * * * * *
	SETCHR SETSPD XMTTRM	SET TERMINAL CHARACTERISTICS INITIALIZE THE TERMINAL SPEED TRANSMIT TO THE TERMINAL LINE

LANEVB

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
	LINE
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
TRMLAN	RELEASE THE PORT TO THE LAN
WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

NHSNEB

CONTRACTO CONTRACTOR

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

Include	Module	Module
File	Name	Purpose
	COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
	DACSES	REPORT A SESSION FAILURE TO NTM
	IDLINE	PROCESS INPUT OR TIMER RUNOUT
	LBRESP	PROCESS RESPONSE TO LINE BID
	PINPMS	PROCESS MESSAGE FROM OTHER COMM
	REPTER	REPORT RECOVERABLE ERROR TO NTM
	SCTLMS	REPORT RECOVERABLE ERROR OR STATUS MSG TO NTH
	WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN

NLSNEB

ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
LBRESP	PROCESS RESPONSE TO LINE BID
PINPMS	PROCESS MESSAGE FROM OTHER COMM

NRCVEB

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
LBRESP	PROCESS RESPONSE TO LINE BID
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER

COMM Where-include-file-used List

Include	Module	Module
File	Name	Purpose

NTMHDR

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
PINPMS	PROCESS MESSAGE FROM OTHER COMM
POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER

NTHINB

STED TO BY NTM
R TIMER RUNOUT
THER COMM
TIONS SUBSYSTEM
TIONS SUBSYSTEM
INOUT
;
\$
RECEIVE BUFFER
BID
R COMM

NTMOUB

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GOUTMS	GET A MESSAGE FROM NTM

Include	Module	Module
File	Name	Purpose
	IDLINE	PROCESS INPUT OR TIMER RUNOUT
	INTVH	INITIALIZE COMM VARIABLES
	INTVI	INITIALIZE COMM VARIABLES
	LBRESP	PROCESS RESPONSE TO LINE BID
	POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER

RCVBLK

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
	LINE
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KMINDA	COMPRESS THE DATA IN THE RECEIVE BUFFER
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PINPMS	PROCESS MESSAGE FROM OTHER COMM
RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
TRCVH1	TEST 1ST BYTE IN HEADER OF RECEIVED MSG
TRCVH2	TEST 2ND BYTE IN HEADER OF RECEIVED MSG
TRMLAN	
UDRSQN	UPDATE RECEIVE SEQUENCE NUMBER
WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

RPTERR

Include File	Module Name	Module Purpose
	ACTSES ALINPS ALRESP LBRESP PINPMS	ACTIVATE SESSION IF REQUESTED TO BY NTM WAIT FOR INPUT FROM LAN OR TIMER RUNOUT RESPOND TO MESSAGE FROM OTHER COMM PROCESS RESPONSE TO LINE BID PROCESS MESSAGE FROM OTHER COMM

TIMEVB

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSISTEM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PINPMS	PROCESS MESSAGE FROM OTHER COMM
STRTIM	SET APPROPRIATE TIME INTERVAL AND START
	TIMER
WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

XMTBLK

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
COMAH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INILAN	INITIALIZE THE LAN TERMINAL INTERFACE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN

COMM Where-include-file-used List

Include File	Module Name	Module Purpose
	LBRESP	PROCESS RESPONSE TO LINE BID
	LINBID	TRANSMIT A LINE BID MESSAGE
	PINPMS	PROCESS MESSAGE FROM OTHER COMM
	POUTMS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER
	TRCVH2	TEST 2ND BYTE IN HEADER OF RECEIVED MSG
	TRMLAN	RELEASE THE PORT TO THE LAN
	UDXSQN	UPDATE TRANSMIT SEQUENCE NUMBER
	WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
	XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
	XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

3.10.6 Where External Routine Used List

The following lists each external function or routine listed in 3.10.3 and all the documented modules which call it. The purpose of each module is listed as well.

COMM Where-external-routine-used List

System	module	Module
Module	Name	Purpose
		are on the last are are un
CNLTIM		
	ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
	IDLINE	PROCESS INPUT OR TIMER RUNOUT
	KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
	LBRESP	PROCESS RESPONSE TO LINE BID

DELMBX

COMVH	MAIN	MODULE	FOR	COMMUNICATIONS	SUBSYSTEM
COMAI	MAIN	MODULE	FOR	COMMUNICATIONS	SUBSYSTEM

WIRESP WAIT FOR THE FIRST MESSAGE ON THE LAN

ERRPRO

ACTSES	ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS	WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP	RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
CNLTRM	CANCEL TERMINAL IO
COMVH	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
DACSES	REPORT A SESSION FAILURE TO NTM
EXOUDA	EXPAND NTM DATA IF CONTROL CHARS OR BINARY
GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL
	LINE
GOUTMS	GET A MESSAGE FROM NTM
IDLINE	PROCESS INPUT OR TIMER RUNOUT
INITRM	INITIALIZE THE TERMINAL LINE
INTVH	INITIALIZE COMM VARIABLES
INTVI	INITIALIZE COMM VARIABLES
KPLXMT	PUT FINISHING TOUCHES ON MESSAGE TO LAN
LBRESP	PROCESS RESPONSE TO LINE BID
LINBID	TRANSMIT A LINE BID MESSAGE
PARITY	SET CHANNEL TO EVEN PARITY
PINPMS	PROCESS MESSAGE FROM OTHER COMM

COMM Where-external-routine-used List

System Module	Module Name	Module Purpose
	POUTHS	MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER
	PURGE	CLEAR THE TYPE AHEAD BUFFER
	RCV5H	RECEIVE 5 CURSORS FROM THE IBM
	RCVIBM	READ TERMINAL LINE FROM PROTOCOL CONVERTER **
	RCVLAN	RECEIVE FROM A LAN TERMINAL LINE
	RCVTRM	READ TERMINAL LINE WITH EVENT FLAG
	REPTER	REPORT RECOVERABLE ERROR TO NTM
	SCTLMS	REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM
	SETSPD	INITIALIZE THE TERMINAL SPEED .
	STRTIM	SET APPROPRIATE TIME INTERVAL AND START TIMER
	WIRESP	WAIT FOR THE FIRST MESSAGE ON THE LAN
	XMTLAN	TRANSMIT TO A LAN TERMINAL LINE
	XMTMSG	TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER
	XMTTRM	TRANSMIT TO THE TERMINAL LINE
FREVTF	CNLLAN	CANCEL A LAN TERMINAL LINE RECEIVE
	GETLAN	GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE
GETMSG		
GEIRGG	GOUTMS	GET A MESSAGE FROM NTM
INICOM	INTVH	INITIALIZE COMM VARIABLES

COMM Where-external-routine-used List

System Module Module Module Name Purpose

INTVI INITIALIZE COMM VARIABLES

INSTNC

SCTLMS REPORT RECOVERABLE ERROR OR STATUS MSG TO

NTM

LIB\$GET EF

RCVIBM READ TERMINAL LINE FROM PROTOCOL

CONVERTER **

RCVTRM READ TERMINAL LINE WITH EVENT FLAG

RCVMSG

GOUTMS GET A MESSAGE FROM NTM
INTVH INITIALIZE COMM VARIABLES
INTVI INITIALIZE COMM VARIABLES

RELEVB

COMVH MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

SETTIM

PINPMS PROCESS MESSAGE FROM OTHER COMM STRTIM SET APPROPRIATE TIME INTERVAL AND START

TIMER

SNDMSG

PINPMS PROCESS MESSAGE FROM OTHER COMM

COMM Where-external-routine-used List

System Module Module

Module

Name

Purpose

SCTLMS

REPORT RECOVERABLE ERROR OR STATUS MSG TO

NTM

SYS\$ALLOC

INITRM INITIALIZE THE TERMINAL LINE

SYS\$ASSIGN

INITRM

INITIALIZE THE TERMINAL LINE

SYS\$CANCEL

CNLTRM

CANCEL TERMINAL IO

SYS\$QIO

RCV5H RCVIBM RECEIVE 5 CURSORS FROM THE IBM READ TERMINAL LINE FROM PROTOCOL

CONVERTER **

RCVTRM

READ TERMINAL LINE WITH EVENT FLAG

SYS\$QIOW

PARITY

SET CHANNEL TO EVEN PARITY

PURGE

CLEAR THE TYPE AHEAD BUFFER

SETCHR

SET TERMINAL CHARACTERISTICS

COMM Where-external-routine-used List

System	Module	Module
Module	Name	Purpose

SETSPD INITIALIZE THE TERMINAL SPEED KMTTRM TRANSMIT TO THE TERMINAL LINE

SYS\$SETPRI

RCVIBM READ TERMINAL LINE FROM PROTOCOL

CONVERTER **

RCVTRM READ TERMINAL LINE WITH EVENT FLAG

XMTTRM TRANSMIT TO THE TERMINAL LINE

TRMNAX

COMVH MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

WAIT01

ACTSES ACTIVATE SESSION IF REQUESTED TO BY NTM

PINPMS PROCESS MESSAGE FROM OTHER COMM

WAITO2

ALINPS WAIT FOR INPUT FROM LAN OR TIMER RUNOUT

LBRESP PROCESS RESPONSE TO LINE BID

WIRESP WAIT FOR THE FIRST MESSAGE ON THE LAN

WAIT03

IDLINE PROCESS INPUT OR TIMER RUNOUT

COMM Where-external-routine-used List

System Module Module Module Name Purpose

3.10.7 Main Program Parts List

The following lists each Main Program listed in 3.10.1 and all the modules which are called either by that module itself or by any of the documented modules which it calls. It is possible for a non-main module to be listed more that once if it is called by multiple modules. The called modules, in this case known as program parts, are marked as to whether they are documented here. If so, the phrase "well-defined module" appears by the module name, if not it is an "external "routine". The Purpose of the Main Program module is listed as well.

COMM Main Program Parts List

Main Pgm	Module	Module
Name	Name	Туре
		the same fitting the same same
COMUL	Dummaga	. MATH MODHLE POD COMMINICANIONS
COMAH	Purpose	MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
	ACTSES	Well-defined module
	ALINPS	Well-defined module
	ALRESP	Well-defined module
	CNLLAN	Well-defined module
	CNLTIM	External routine
	CNLTRM	Well-defined module
	DACSES	Well-defined module
	DELMBX	External routine
	ERRPRO	External routine
	EXOUDA	Well-defined module
	FREVTF	External routine
	GETLAN	Well-defined module
	GETMSG	External routine
	GOUTMS	Well-defined module
	IDLINE	Well-defined module
	INICOM	External routine
	INILAN	Well-defined module
	INITRM	Well-defined module
	INSTNC	External routine
	INTVH	Well-defined module
	KLCLRC	Well-defined module
	KMINDA	Well-defined module
	KPLXMT	Well-defined module
	LBRESP	Well-defined module
	LIB\$GET_EF	External routine
	LINBID -	Well-defined module
	PARITY	Well-defined module
	PINPMS	Well-defined module
	POUTMS	Well-defined module
	PURGE	Well-defined module
	RCV5H	Well-defined module
	RCVIBM	Well-defined module
	RCVLAN	Well-defined module
	RCVMSG	External routine
	RCVTRM	Well-defined module
	RELEVB	External routine
	REPTER	Well-defined module
	SCTLMS	Well-defined module

COMM Main Program Parts List

Main Pgm	Module	Module
Name	Name	Туре
	SETCHR	Well-defined module
	SETSPD	Well-defined module
	SETTIM	External routine
	SNDMSG	External routine
	STRTIM	Well-defined module
	SYS\$ALLOC	External routine
	SYS\$ASSIGN	External routine
	SYS\$CANCEL	External routine
	SYS\$QIO	External routine
	SYS\$QIOW	External routine
	SYS\$SETPRI	External routine
	TRCVH1	Well-defined module
	TRCVH2	Well-defined module
	TRMLAN	Well-defined module
	TRMNAX	External routine
	UDRSQN	Well-defined module
	UDXSQN	Well-defined module
	WIRESP	Well-defined module
	WAITOI	External routine
	WAITO2	External routine
	WAITOZ WAITO3	External routine
	XMTLAN	
		Well-defined module
	XMTMSG	Well-defined module
	XMTTRM	Well-defined module

COMM Main Program Parts List

The course because the second and the second and the second second second second second second second

Main Pgm	Module	Module
Name	Name	Туре
	~	
COMVI	Purpose-	-> MAIN MODULE FOR COMMUNICATIONS
	, ,	SUBSYSTEM
	ACTSES	Well-defined module
	ALINPS	Well-defined module
	ALRESP	Well-defined module
	CNLLAN	Well-defined module
	CNLTIM	External routine
	CNLTRM	Well-defined module
	DACSES	Well-defined module
	DELMBX	Extern: 1 routine
	ERRPRO	External routine
	EXOUDA	Well-defined module
	FREVTF	External routine
	GETLAN	Well-defined module
	GETMSG	External routine
	GOUTHS	Well-defined module
	IDLINE	Well-defined module
	INICOM	External routine
	INILAN	Well-defined module
	INITRM	Well-defined module
	INSTNC	External routine
	INTVI	Well-defined module
	KLCLRC	Well-defined module
	KMINDA	Well-defined module
	KPLXMT	Well-defined module
	LBRESP	Well-defined module
	LIB\$GET_EF	External routine
	LINBID	Well-defined module
	PARITY	Well-defined module
	PINPMS	Well-defined module
	POUTMS	Well-defined module
	PURGE	Well-defined module
	RCV5H	Well-defined module
	RCVIBM	Well-defined module
	RCVLAN	Well-defined module
	RCVMSG	External routine
	RCVTRM	Well-defined module External routine
	RELEVB	External routine Well-defined module
	REPTER	
	SCTLMS	Well-defined module

COMM Main Program Parts List

Main Pgm	Module	Module
Name	Name	Туре
	SETCHR	Well-defined module
	SETSPD	Well-defined module
	SETTIM	
	SNDMSG	External routine
		External routine
	STRTIM	Well-defined module
	SYS\$ALLOC	External routine
	SYS\$ASSIGN	External routine
	SYS\$CANCEL	External routine
	SYS \$Q IO	External routine
	SYS \$QIOW	External routine
	SYS\$SETPRI	External routine
	TRCVH1	Well-defined module
	TRCVH2	Well-defined module
	TRMLAN	Well-defined module
	TRMNAX	External routine
	UDRSQN	Well-defined module
	UDXSQN	Well-defined module
	WIRESP	Well-defined module
	WAITO1	External routine
	WAITO2	
	WAITOZ WAITO3	External routine
	-	External routine
	XMTLAN	Well-defined module
	XMTMSG	Well-defined module
	XMTTRM	Well-defined module

3.10.8 Module Documentation

C

The following documentation describes information which is specific to each individual module being documented in this specification as listed in section 3.10.2. It provides a compact way of getting information that would be otherwise buried within each module's source code.

The specific items in this module documentation have the following meanings:

NAME: Name of program Module.

PURPOSE: Purpose of Module as detailed in the

source code.

LANGUAGE: Programming language source code is

written in.

The choices are:

VAX-11 FORTRAN

(I/S-1 Workbench 'C') VAX-11 COBOL

MODULE TYPE: Whether a Program, Subroutine, or

Function.

SOURCE FILE: Name of Source File from file

specification.

SOURCE FILE TYPE: Source File Extension from file

specification.

HOST: Whether this is a host-dependent

routine (VAX or IBM) or blank if

host-independent.

SUBSYSTEM: IISS sub-system this file resides in.

SUBDIRECTORY: Sub-directory of that subsystem in

which this file resides.

DOCUMENTATION GROUP: Name of documentation group of which

this source file is a member.

DESCRIPTION: A description of the module as otained from the source code.

ARGUMENTS: The arguments with which this routine

is called if it is a Subroutine or a

Function.

INCLUDE FILES: A list of all the files that are

included into this module as well as

their purposes.

ROUTINES CALLED: Subroutines or Functions, either

documented or external, called by

this module, if any.

CALLED DIRECTLY BY: The documented routines which call

this module, if any.

USED IN MAIN PROGRAM(S): The documented Main Programs which

contain this module in their parts list according to the list in section

3.10.7.

The Module Documentation is arranged alphabetically according to Module Name.

COMM Module Documentation

NAME:

ACTSES

PURPOSE:

ACTIVATE SESSION IF REQUESTED TO BY NTM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

ACTSES

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- ACTSES WAITS TO RECEIVE A MESSAGE FROM NTM. IF THE MESSAGE IS 'START A SESSION', ACTSES INITIATES THE PROCEDURE TO HANDLE THE LOCAL AREA NETWORK COMMUNICATIONS. IF THE MESSAGE IS 'TERMINATE THE SESSION', THAT REQUEST IS NOTED HERE BUT PROCESSED BY THE MAIN MODULE. ANY OTHER REQUEST FROM NTM IS CONSIDERED AN ERROR.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]

TIMER-EVENT-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]

FLAGS = RECRD

NTM-OUTPUT-BLOCK = RECRD

NTM-INPUT-MSG-POSITION = DSPLY [9(4)]

NTM-INPUT-MSG = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

CHKSTS - CHKSTS.INC -- CHECK STATUS

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

NRCVEB - NRCVEB - INCLUDE FILE TIMEVB - TIMEVB.INC -- TIME EV - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

NHSNEB - NHSNEB - INCLUDE FILE

XMTBLK - XMTBLK - INCLUDE FILE

RCVBLK - RCVBLK - INCLUDE FILE

COMFLG - COMFLG - INCLUDE FILE

NTMOUB - NTMOUB - INCLUDE FILE

NTMHDR - NTMHDR - INCLUDE FILE

NTMINE - NTMINE - INCLUDE FILE

RPTERR - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

WAITO1

GOUTHS - GET A MESSAGE FROM NTM XMTMSG - TRANSMIT MESSAGE TO COI - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

WIRESP - WAIT FOR THE FIRST MESSAGE ON THE LAN

REPTER - REPORT RECOVERABLE ERROR TO NTM

ERRPRO

CALLED DIRECTLY BY:

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI

COMM Module Documentation

NAME:

ALINPS

PURPOSE:

WAIT FOR INPUT FROM LAN OR TIMER RUNOUT

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

ALINPS

SOURCE FILE TYPE:

.COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- ALINPS WAITS FOR EITHER THE TIMER TO RUN OUT OR FOR A MESSAGE FROM THE COMM ON THE OTHER COMPUTER. IF THE TIMER RUNS OUT, ALINPS CANCELS THE OUTSTANDING RECEIVE ON THE LAN PORT. IF COMM IS MASTER, ALINPS CAUSES THE ORIGINAL MESSAGE TO BE RETRANSMITTED. IF COMM IS SLAVE AND THERE IS DATA TO BE SENT TO THE COMM ON THE OTHER COMPUTER, ALINPS SETS THE RETRY COUNT TO CAUSE THE SESSION TO BE TERMINATED. IF THERE IS NO DATA TO BE SENT, ALINPS CHANGES THE STATE OF COMM TO SESSION ACTIVE, LINE IDLE.

IF ALINPS RECEIVES A MESSAGE FROM THE COMM ON THE OTHER COMPUTER, IT CALLS ALRESP TO SEND A RESPONSE.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]

TIMER-EVENT-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

NTM-SEND-EVENT-BLOCK-L = DSPLY [X(2032)]

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]

TARGET-MAILBOX-NAME-L = DSPLY [X(14)]

FLAGS = RECRD

NTM-OUTPUT-BLOCK = RECRD

NTM-INPUT-MSG-POSITION = DSPLY [9(4)]

NTM-INPUT-MSG = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE ERRSTS - ERRSTS.INC -- IISS ERROR CODES - CHKSTS.INC -- CHECK STATUS CHKSTS - LANEVB.INC -- LAN TERMINAL EVENT BLOCK LANEVB DESCRIPTION NRCVEB - NRCVEB - INCLUDE FILE TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION NHSNEB - NHSNEB - INCLUDE FILE - NLSNEB - INCLUDE FILE NLSNEB XMTBLK - XMTBLK - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE COMFLG - COMFLG - INCLUDE FILE - NTMOUB - INCLUDE FILE NTMOUB - NTMINB - INCLUDE FILE NTMINB RPTERR - **** PURPOSE NOT FOUND BY STRIPPER **** ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

WAITO2
CNLTIM
GETLAN - GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE
ALRESP - RESPOND TO MESSAGE FROM OTHER COMM
CNLLAN - CANCEL A LAN TERMINAL LINE RECEIVE
XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER
RCVLAN - RECEIVE FROM A LAN TERMINAL LINE
REPTER - REPORT RECOVERABLE ERROR TO NTM
ERRPRO

CALLED DIRECTLY BY:

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

<u>ᡶ</u>ᡊᡓᠧ᠘ᠸᠸᡓᠧᢋᡡᡶᡤᢏᠧᠽᠽᠽᠽ᠘ᡓ᠘ᡷᠽᢣᡧᢋᢠᢏᡯᡧᢏᢛᡈᡀᡈᡈᡈᡀᡈᢢᡈᢌᡒᡉᡓᠤᢙᠻᡊᡈᢔᡈᡊᢙᢔᠪᡈᡠᡳᢙᡚᡚᡚᡚᡚᡚᡚᡚᡚᡚᡚᡚ

CONVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

CONVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM CONVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME:

ALRESP

PURPOSE:

RESPOND TO MESSAGE FROM OTHER COMM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

ALRESP . COB

SOURCE FILE TYPE: HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- ALRESP CHECKS FIRST FOR AN END OF TRANSMISSION OR LINE BID MESSAGE FROM COMM ON THE OTHER COMPUTER. IF THE MESSAGE IS EITHER EOT OR LINE BID, ALRESP CHANGES THE STATE OF COMM TO SESSION ACTIVE, LINE IDLE. IF THE MESSAGE IS NEITHER, ALRESP VALIDATES THE INCOMING MESSAGE. IF COMM HAD SENT A MESSAGE TO COMM ON THE OTHER COMPUTER, ALRESP CHECKS THAT IT WAS RECEIVED. IF IT WAS NOT, THE MESSAGE IS RETRANSMITTED. IF IT WAS, THE NEXT BLOCK OF DATA IS SENT IF THERE IS ONE.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]

TIMER-EVENT-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

NTM-SEND-EVENT-BLOCK-L = DSPLY [X(2032)]

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]

FLAGS = RECRD NTM-OUTPUT-BLOCK = RECRD NTM-INPUT-MSG-POSITION = DSPLY [9(4)]NTM-INPUT-MSG = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE
CHKSTS - CHKSTS.INC -- CHECK STATUS
ERRSTS - ERRSTS.INC -- IISS ERROR CODES
LAMEUR INC. LAMEUR INC. LAMEUR INC. - LANEVB. INC -- LAN TERMINAL EVENT BLOCK LANEVB DESCRIPTION NRCVEB - NRCVEB - INCLUDE FILE TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION NHSNEB - NHSNEB - INCLUDE FILE - NLSNEB - INCLUDE FILE NLSNEB XMTBLK - XMTBLK - INCLUDE FILE - RCVBLK - INCLUDE FILE RCVBLK - COMFLG - INCLUDE FILE COMFLG NTMOUB - NTMOUB - INCLUDE FILE NTMINB - NTMINB - INCLUDE FILE RPTERR - **** PURPOSE NOT FOUND BY STRIPPER **** ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

RCVLAN - RECEIVE FROM A LAN TERMINAL LINE
TRCVH2 - TEST 2ND BYTE IN HEADER OF RECEIVED MSG
PINPMS - PROCESS MESSAGE FROM OTHER COMM - MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER POUTMS - UPDATE TRANSMIT SEQUENCE NUMBER - PUT FINISHING TOUCHES ON MESSAGE TO LAN UDXSQN KPLXMT REPTER - REPORT RECOVERABLE ERROR TO NTM ERRPRO

CALLED DIRECTLY BY: --------------

- WAIT FOR INPUT FROM LAN OR TIMER RUNOUT ALINPS LBRESP - PROCESS RESPONSE TO LINE BID

USED IN MAIN PROGRAM(S):

SECTION OF SHIP OF SECTION OF SHIP OF

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME: CNLLAN

PURPOSE: CANCEL A LAN TERMINAL LINE RECEIVE

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: CNLLAN SOURCE FILE TYPE: .COB HOST: VAX

SUBSYSTEM: SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

CANCEL AN OUTSTANDING LAN RECEIVE REQUEST.

COMM

ARGUMENTS:

RCV-BLOCK = RECRD

LAN-EVENT-BLOCK = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CHKSTS - CHKSTS.INC -- CHECK STATUS

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

RCVBLK - RCVBLK - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

CNLTRM - CANCEL TERMINAL IO

FREVTF ERRPRO

CALLED DIRECTLY BY:

ALINPS - WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
IDLINE - PROCESS INPUT OR TIMER RUNOUT
LBRESP - PROCESS RESPONSE TO LINE BID
WIRESP - WAIT FOR THE FIRST MESSAGE ON THE LAN

USED IN MAIN PROGRAM(S):

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVH COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME:

CNLTRM

PURPOSE:

CANCEL TERMINAL IO

LANGUAGE:

VAX-11 FORTRAN

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

CNLTRM

SOURCE FILE TYPE:

. FOR

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

CANCEL A RECEIVE TO A TERMINAL LINE

ARGUMENTS: ------

CHANNL = I*2

- TERMINAL CHANNEL NUMBER

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO

SYS\$CANCEL

CALLED DIRECTLY BY:

CNLLAN - CANCEL A LAN TERMINAL LINE RECEIVE

USED IN MAIN PROGRAM(S):

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVH

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

CASSAST CASSASTA RECORDED

COMM Module Documentation

NAME:

COMVH

PURPOSE:

MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

PROGRAM

SOURCE FILE:

COMVH

SOURCE FILE TYPE:

. COB

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- COMM IS ALWAYS IN ONE OF FOUR STATES.
- 1. SESSION INACTIVE COMM IS EXECUTING BUT IT HAS NOT ESTABLISHED COMMUNICATIONS WITH THE NTM YET.
- 2. SESSION ACTIVE, LINE IDLE COMM AND NTM HAVE ESTABLISHED COMMUNICATIONS BUT NTM HAS NO MESSAGES TO SEND AND COMM IS NOT RECEIVING ANY MESSAGES FROM THE COMM ON THE OTHER COMPUTER.
- 3. SESSION ACTIVE, LINE BID NTM HAS REQUESTED THAT A MESSAGE BE SENT ACROSS THE LOCAL AREA NETWORK TO THE OTHER COMPUTER AND COMM IS REQUESTING PERMISSION FROM THE COMM ON THE OTHER COMPUTER TO BECOME MASTER OF THE LAN LINE.
- 4. SESSION ACTIVE, LINE ACTIVE COMM IS RECEIVING A MESSAGE FROM THE COMM ON THE OTHER COMPUTER AND MUST SEND IT TO THE NTM AFTER REASSEMBLY, IF REQUIRED, IS DONE; OR, COMM IS SENDING A MESSAGE TO THE COMM ON THE OTHER COMPUTER FOR NTM.

THE MAIN MODULE LOOPS FOREVER DETERMINING THE STATE OF COMM AND PERFORMING THE REQUIRED PROCESSING. FOREVER ENDS IF AN ERROR OCCURS OR IF NTM REQUESTS COMM TO TERMINATE, AT WHICH TIME COMM SHUTS ITSELF DOWN.

IF COMM IS EXPERIENCING DIFFICULTIES GETTING SUCCESSFUL TRANSMISSION RESPONSES FROM THE

COMM ON THE OTHER COMPUTER, IT WILL PLACE ITSELF IN THE SESSION INACTIVE STATE.

INCLUDE FILES:

COMCON	- COMCON - INCLUDE FILE
LANEVB	- LANEVB.INC LAN TERMINAL EVENT BLOCK
	DESCRIPTION
NRCVEB	- NRCVEB - INCLUDE FILE
NLSNEB	- NLSNEB - INCLUDE FILE
NHSNEB	- NHSNEB - INCLUDE FILE
TIMEVB	- TIMEVB.INC TIME EVENT BLOCK DESCRIPTION
CHKSTS	- CHKSTS.INC CHECK STATUS
COMFLG	- COMFLG - INCLUDE FILE
NTMINB	- NTMINB - INCLUDE FILE
NTMOUB	- NTMOUB - INCLUDE FILE
XMTBLK	- XMTBLK - INCLUDE FILE
RCVBLK	- RCVBLK - INCLUDE FILE
ERRPRO	- PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

	
INTVH	- INITIALIZE COMM VARIABLES
DACSES	- REPORT A SESSION FAILURE TO NTM
ALINPS	- WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
LBRESP	- PROCESS RESPONSE TO LINE BID
IDLINE	- PROCESS INPUT OR TIMER RUNOUT
ACTSES	- ACTIVATE SESSION IF REQUESTED TO BY NTM
DELMBX	·
RELEVB	
TRMLAN	- RELEASE THE PORT TO THE LAN
TRMNAX	
ERRPRO	

COMM Module Documentation

NAME: CONVI

PURPOSE: MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

LANGUAGE: VAX-11 COBOL

MODULE TYPE: PROGRAM SOURCE FILE: COMVI SOURCE FILE TYPE: .COB HOST: VAX

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- COMM IS ALWAYS IN ONE OF FOUR STATES.

- 1. SESSION INACTIVE COMM IS EXECUTING BUT IT HAS NOT ESTABLISHED COMMUNICATIONS /ITH THE NTM YET.
- 2. SESSION ACTIVE, LINE IDLE COMM AND NTM HAVE ESTABLISHED COMMUNICATIONS BUT NTM HAS NO MESSAGES TO SEND AND COMM IS NOT RECEIVING ANY MESSAGES FROM THE COMM ON THE OTHER COMPUTER.
- 3. SESSION ACTIVE, LINE BID NTM HAS REQUESTED THAT A MESSAGE BE SENT ACROSS THE LOCAL AREA NETWORK TO THE OTHER COMPUTER AND COMM IS REQUESTING PERMISSION FROM THE COMM ON THE OTHER COMPUTER TO BECOME MASTER OF THE LAN LINE.
- 4. SESSION ACTIVE, LINE ACTIVE COMM IS RECEIVING A MESSAGE FROM THE COMM ON THE OTHER COMPUTER AND MUST SEND IT TO THE NTM AFTER REASSEMBLY, IF REQUIRED, IS DONE; OR, COMM IS SENDING A MESSAGE TO THE COMM ON THE OTHER COMPUTER FOR NTM.

የያለና እና የተመሰበበት የአካባ ተመሰር እና የሚከተ እንደ የመቀር የሚከር እና የሚከር

THE MAIN MODULE LOOPS FOREVER DETERMINING THE STATE OF COMM AND PERFORMING THE REQUIRED PROCESSING. FOREVER ENDS IF AN ERROR OCCURS OR IF NTM REQUESTS COMM TO TERMINATE, AT WHICH TIME COMM SHUTS ITSELF DOWN.

IF COMM IS EXPERIENCING DIFFICULTIES GETTING SUCCESSFUL TRANSMISSION RESPONSES FROM THE

COMM ON THE OTHER COMPUTER, IT WILL PLACE ITSELF IN THE SESSION INACTIVE STATE.

INCLUDE FILES:

COMCON	- COMCON - INCLUDE FILE
LANEVB	- LANEVB.INC LAN TERMINAL EVENT BLOCK
	DESCRIPTION
NRCVEB	- NRCVEB - INCLUDE FILE
NLSNEB	- NLSNEB - INCLUDE FILE
NHSNEB	- NHSNEB - INCLUDE FILE
TIMEVB	- TIMEVB.INC TIME EVENT BLOCK DESCRIPTION
CHKSTS	- CHKSTS.INC CHECK STATUS
COMFLG	- COMFLG - INCLUDE FILE
NTMINB	- NTMINB - INCLUDE FILE
NTMOUB	- NTMOUB - INCLUDE FILE
XMTBLK	- XMTBLK - INCLUDE FILE
RCVBLK	- RCVBLK - INCLUDE FILE
ERRPRO	- PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

INTVI	- INITIALIZE COMM VARIABLES
DACSES	- REPORT A SESSION FAILURE TO NTM
ALINPS	- WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
LBRESP	- PROCESS RESPONSE TO LINE BID
IDLINE	- PROCESS INPUT OR TIMER RUNOUT
ACTSES	- ACTIVATE SESSION IF REQUESTED TO BY NTM
DELMBX	·
RELEVB	
TRMLAN	- RELEASE THE PORT TO THE LAN
TRMNAX	
ERRPRO	

NAME:

DACSES

PURPOSE:

REPORT A SESSION FAILURE TO NTM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

DACSES

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- DACSES SETS THE FLAGS TO INDICATE THAT COMM IS INACTIVE AND HAS COMPLETED A SHUT DOWN. IT ALSO SENDS A CONTROL MESSAGE TO NTM.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]
TARGET-MAILBOX-NAME-H = DSPLY [X(14)]
FLAGS = RECRD
RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

CHKSTS - CHKSTS.INC -- CHECK STATUS

NHSNEB - NHSNEB - INCLUDE FILE

COMFLG - COMFLG - INCLUDE FILE

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

ERRPRO

SCTLMS - REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM

CALLED DIRECTLY BY:

COMVH

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM IDLINE - PROCESS INPUT OR TIMER RUNOUT

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME:

EXOUDA

PURPOSE:

EXPAND NTM DATA IF CONTROL CHARS OR BINARY

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE EXOUDA

SOURCE FILE: SOURCE FILE TYPE:

. COB

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- EXOUDA MOVES THE MESSAGE RECEIVED FROM THE NTM TO THE DATA PORTION OF THE OUTPUT BUFFER IN PREPARATION FOR TRANSMISSION ACROSS THE LAN TO ANOTHER COMM. THE NTM HEADER IS MOVED EXACTLY AST IT IS. THE MESSAGE PORTION IS HANDLED DIFFERENTLY DEPENDING UPON ITS TYPE. IF THE MESSAGE TYPE IS NATIVE, EXOUDA SEARCHES THE MESSAGE FOR CONTROL CHARACTERS AND CONVERTS THEM TO TWO CHARACTERS, A CHARACTER THAT INDICATES TYPE OF CONTROL CHARACTER FOLLOWED BY A TRANSMITTABLE CHARACTER THAT IS USED AS A CODE TO INDICATE THE ORIGINAL CONTROL CHARACTER. IF THE MESSAGE TYPE IS BINARY, ALL THE CHARACTERS ARE TREATED AS IF THEY WERE NOT TRANSMITTABLE. EACH CHARACTER IS DIVIDED INTO TWO 4-BIT NIBBLES. THE CHARACTER EQUIVALENT OF THE VALUE OF EACH NIBBLE IS STORED IN THE OUTPUT BUFFER. EXOUDA SETS THE CONTROL BYTE IN THE HEADER OF THE COMM OUTPUT MESSAGE TO INDICATE THE TYPE OF DATA BEING SENT AND WHETHER THE BLOCK OF DATA IS COMPLETE.

ARGUMENTS:

NTM-OUTPUT-BLOCK = RECRD

XMIT-BLOCK = RECRD FLAGS = RECRD

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE
ERRSTS - ERRSTS.INC -- IISS ERI - ERRSTS.INC -- IISS ERROR CODES ASCII - ASCII- INCLUDE FILE NTMOUB - NTMOUB - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE
COMFLG - COMFLG - INCLUDE FILE
ERRPRO - PROCESS FROM

- PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

ERRPRO

CALLED DIRECTLY BY:

- MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME:

GETLAN

PURPOSE:

GET A MESSAGE RECEIVED FROM A LAN

TERMINAL LINE

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

GETLAN

SOURCE FILE TYPE:

. COB

HOST:

VAX

COMM

SUBSYSTEM: SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

GET THE MESSAGE RECEIVED FROM THE TERMINAL. AN EVENT FLAG

HAS INDICATED THE ARRIVAL OF THE MSG.

ARGUMENTS:

RCV-BLOCK = RECRD

LAN-EVENT-BLOCK = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CHKSTS - CHKSTS.INC -- CHECK STATUS

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

RCVBLK - RCVBLK - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

FREVTF

ERRPRO

CALLED DIRECTLY BY:

ALINPS - WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
IDLINE - PROCESS INPUT OR TIMER RUNOUT
LBRESP - PROCESS RESPONSE TO LINE BID
WIRESP - WAIT FOR THE FIRST MESSAGE ON THE LAN

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME:

GOUTMS

PURPOSE:

GET A MESSAGE FROM NTM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

GOUTMS

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- GOUTMS DETERMINES IF THERE IS A MESSAGE FROM NTM IN THE MAILBOX. IF ONE IS PRESENT, IT IS MOVED INTO COMM STORAGE AND A NEW RECEIVE IS ISSUED FOR THE NTM MAILBOX.

EXCEPT FOR "MAILBOX EMPTY", ANY BAD STATUS CONDITION IN THIS ROUTINE IS FATAL TO COMM.

ARGUMENTS:

INPUT-MAILBOX-NAME = DSPLY [X(14)]
NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]
NTM-OUTPUT-BLOCK = RECRD
RET-STATUS = DSPLY [9(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE
ERRSTS - ERRSTS.INC -- IISS ERROR CODES
CHKSTS - CHKSTS.INC -- CHECK STATUS
NRCVEB - NRCVEB - INCLUDE FILE
NTMOUB - NTMOUB - INCLUDE FILE
NTMHDR - NTMHDR - INCLUDE FILE
ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

GETMSG

RCVMSG

ERRPRO

CALLED DIRECTLY BY:

ACTSES - ACTIVATE SESSION IF REQUESTED TO BY NTM

IDLINE - PROCESS INPUT OR TIMER RUNOUT

POUTHS - MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT BUFFER

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COLORDO DE LA COLORDO DE L

NAME: IDLINE

PURPOSE: PROCESS INPUT OR TIMER RUNOUT

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: IDLINE SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- IDLINE FIRST CHECKS FOR A REQUEST FROM NTM TO TERMINATE THE SESSION. IF THE REQUEST HAS BEEN MADE, IDLINE CAUSES THE SESSION TO END. IF NTM HAS NOT MADE THE REQUEST, IDLINE WAITS FOR THE TIMER TO RUN OUT OR FOR A MESSAGE FROM EITHER NTM OR FROM COMM ON THE OTHER COMPUTER. IF A LINE BID IS RECEIVED FROM THE OTHER COMM, A POSITIVE ACKNOWLEDGEMENT IS RETURNED AND THE STATE OF COMM IS CHANGED TO SESSION ACTIVE, LINE ACTIVE. IF A MESSAGE IS RECEIVED FROM NTM, A LINE BID IS SENT TO THE COMM ON THE OTHER COMPUTER.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]

TIMER-EVENT-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSFLY [X(14)]

FLAGS = RECRD NTM-OUTPUT-BLOCK = RECRD NTM-INPUT-MSG-POSITION = DSPLY [9(4)] NTM-INPUT-MSG = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

	_
COMCON	- COMCON - INCLUDE FILE
ERRSTS	- ERRSTS.INC IISS ERROR CODES
CHKSTS	- CHKSTS.INC CHECK STATUS
LANEVB	- LANEVB.INC LAN TERMINAL EVENT BLOCK
	DESCRIPTION
NRCVEB	- NRCVEB - INCLUDE FILE
TIMEVB	- TIMEVB.INC TIME EVENT BLOCK DESCRIPTION
NHSNEB	- NHSNEB - INCLUDE FILE
XMTBLK	- XMTBLK - INCLUDE FILE
RCVBLK	- RCVBLK - INCLUDE FILE
COMFLG	- COMFLG - INCLUDE FILE
NTMOUB	- NTMOUB - INCLUDE FILE
NTMHDR	- NTMHDR - INCLUDE FILE
NTMINB	- NTMINB - INCLUDE FILE
ERRPRO	- PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

CNLLAN	- CANCEL A LAN TERMINAL LINE RECEIVE
DACSES	- REPORT A SESSION FAILURE TO NTM
WAIT03	
GETLAN	- GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE
XMTMSG	- TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER
CNLTIH	
RCVLAN	- RECEIVE FROM A LAN TERMINAL LINE
GOUTMS	- GET A MESSAGE FROM NTM
LINBID	- TRANSMIT A LINE BID MESSAGE
ERRPRO	

CALLED DIRECTLY BY:

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

COMAI

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: INILAN

INITIALIZE THE LAN TERMINAL INTERFACE PURPOSE:

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: SOURCE FILE TYPE: INILAN . COB HOST: VAX SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

INITIALIZE THE TERMINAL INTERFACE TO THE LOCAL AREA NETWORK. PLACE THE CHANNEL NUMBER IN THE FIRST TWO BYTE OF THE RCV AND XMT BLOCKS.

ARGUMENTS:

PORT-NAME = RECRD RCV-BLOCK = RECRD XMIT-BLOCK = RECRD LAN-EVENT-BLOCK = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CHKSTS - CHKSTS.INC -- CHECK STATUS
ERRSTS - ERRSTS.INC -- IISS ERROR CODES
RCVBLK - RCVBLK - INCLUDE FILE
YMTBLK - TROUBLE FILE XMTBLK - XMTBLK - INCLUDE FILE

LANEVB - LANEVB. INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ROUTINES CALLED:

INITEM - INITIALIZE THE TERMINAL LINE

CALLED DIRECTLY BY:

INTVH - INITIALIZE COMM VARIABLES
INTVI - INITIALIZE COMM VARIABLES

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: INITRM

PURPOSE: INITIALIZE THE TERMINAL LINE

LANGUAGE: VAX-11 FORTRAN

MODULE TYPE: SUBROUTINE

SOURCE FILE: INITRM
SOURCE FILE TYPE: .FOR
HOST: VAX
SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO ASSIGN A CHANNEL TO THE TERMINAL ON THE LAN

ARGUMENTS:

TARGET = CHAR

- TARGET COMPUTER FLAG

PORTNM = CHAR

- TERMINAL PORT NAME

CHANNL = I*2

- CHANNEL NUMBER

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO

PARITY - SET CHANNEL TO EVEN PARITY
PURGE - CLEAR THE TYPE AHEAD BUFFER

**

SETCHR - SET TERMINAL CHARACTERISTICS • SETSPD - INITIALIZE THE TERMINAL SPEED •

SYS\$ALLOC

SYS\$ASSIGN

CALLED DIRECTLY BY:

INILAN - INITIALIZE THE LAN TERMINAL INTERFACE

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: INTVH

PURPOSE: INITIALIZE COMM VARIABLES

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: INTVH SOURCE FILE TYPE: . COB HOST: VAX SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- INTVH INITIALIZES THE MAILBOX AND PORT INTERFACE VARIABLES AND COMM STORAGE.

ARGUMENTS:

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]LAN-EVENT-BLOCK = RECRD XMIT-BLOCK = RECRD RCV-BLOCK = RECRD INPUT-MAILBOX-NAME = DSPLY [X(14)]TARGET-MAILBOX-NAME-H = DSPLY [X(14)]TARGET-MAILBOX-NAME-L = DSPLY [X(14)]FLAGS = RECRD NTM-OUTPUT-BLOCK = RECRD NTM-INPUT-MSG-POSITION = DSPLY [9(4)]

NTM-INPUT-MSG = RECRD

PORT-NAME = DSPLY [X(12)]

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

CHKSTS - CHKSTS.INC -- CHECK STATUS

NRCVEB - NRCVEB - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE

COMFLG - COMFLG - INCLUDE FILE

NTHOUB - NTHOUB - INCLUDE FILE

NTHINB - NTHINB - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

~-----

INICOM

RCVMSG

INILAN - INITIALIZE THE LAN TERMINAL INTERFACE

ERRPRO

CALLED DIRECTLY BY:

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: INTVI

PURPOSE: INITIALIZE COMM VARIABLES

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: INTVI
SOURCE FILE TYPE: .COB
HOST: VAX
SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- INTCM1 INITIALIZES THE MAILBOX AND PORT INTERFACE VARIABLES AND COMM STORAGE.

ARGUMENTS:

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)] LAN-EVENT-BLOCK = RECRD XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]
TARGET-MAILBOX-NAME-L = DSPLY [X(14)]

FLAGS = RECRD

NTM-OUTPUT-BLOCK = RECRD

NTM-INPUT-MSG-POSITION = DSPLY [9(4)]

NTM-INPUT-MSG = RECRD

PORT-NAME = DSPLY [X(12)]

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

CHKSTS - CHKSTS.INC -- CHECK STATUS

NRCVEB - NRCVEB - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE

COMFLG - COMFLG - INCLUDE FILE
NTMOUB - NTMOUB - INCLUDE FILE
NTMINB - NTMINB - INCLUDE FILE
LANEVB INC

- LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE .

ROUTINES CALLED:

INICOM

RCVMSG

INILAN - INITIALIZE THE LAN TERMINAL INTERFACE

ERRPRO

CALLED DIRECTLY BY:

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: KLCLRC

PURPOSE: CALCULATE LONGITUDINAL REDUNDANCY CHECK

LANGUAGE: VAX-11 COBOL
MODULE TYPE: SUBROUTINE
SOURCE FILE: KLCLRC

SOURCE FILE: KLCLRC
SOURCE FILE TYPE: .COB
HOST: VAX
SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- KLCLRC CALCULATES THE LONGITUDINAL REDUNDANCY CHECK BY ADDING ALL THE CHARACTERS IN THE MESSAGE AND THEN SEPARATING THAT SUM INTO THREE 6-BYTE QUANTITIES. THESE THREE QUANTITIES BECOME INDEXES INTO A TABLE THAT CONTAINS CHARACTERS THAT WILL PASS THROUGH THE HARDWARE UNALTERED. THE THREE CHARACTERS ARE RETURNED TO THE CALLING ROUTINE.

ARGUMENTS:

LRC-BLOCK = RECRD LRC-CHARS-ARRAY = RECRD FLAGS = RECRD

INCLUDE FILES:

ASCII - ASCII- INCLUDE FILE COMFLG - COMFLG - INCLUDE FILE

CALLED DIRECTLY BY:

KPLXMT - PUT FINISHING TOUCHES ON MESSAGE TO LAN PINPMS - PROCESS MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM CONVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: KMINDA

PURPOSE: COMPRESS THE DATA IN THE RECEIVE BUFFER

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: KMINDA
SOURCE FILE TYPE: .COB
HOST: VAX
SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- KMINDA FIRST MOVES THE NTM HEADER PORTION
OF THE MESSAGE TO THE INPUT BUFFER. IT
THEN DETERMINES WHETHER THE DATA PART
OF THE MESSAGE FROM THE COMM ON THE OTHER
COMPUTER IS NATIVE OR BINARY. IF THE
DATA IS NATIVE, KMINDA SEARCHES IT FOR
THE EXCLAMATION (!) CHARACTER. THE !
IS DISCARDED AND THE FOLLOWING CHARACTER
IS CONVERTED TO A CONTROL CHARACTER THAT IS
INSERTED INTO THE MESSAGE FOR THE NTM.
IF THE DATA IS BINARY, KMINDA CONVERTS TWO
CONSECUTIVE CHARACTERS BACK TO THEIR EQUIVALENT
BINARY VALUES AND COMBINES THEM INTO ONE
BYTE THAT IS PUT INTO THE MESSAGE FOR NTM.

ARGUMENTS:

RCV-BLOCK = RECRD NTM-INPUT-MSG = RECRD NTM-INPUT-MSG-POSITION = DSPLY [9(4)] FLAGS = RECRD

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

CTLASC - CTLASC - INCLUDE FILE
RCVBLK - RCVBLK - INCLUDE FILE
COMFLG - COMFLG - INCLUDE FILE
NTMINB - NTMINB - INCLUDE FILE

CALLED DIRECTLY BY:

PINPMS - PROCESS MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME: KPLXMT

PURPOSE: PUT FINISHING TOUCHES ON MESSAGE TO LAN

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: KPLXMT SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- KPLXMT DETERMINES IF THE MESSAGE CONTAINS DATA, IN WHICH CASE, THE LONGITUDINAL REDUNDANCY CHECK (LRC) IS APPENDED TO THE END OF THE DATA; OR IF THE MESSAGE IS ONLY TO INDICATE AN END OF TRANSMISSION (EOT). (EOT INDICATES THAT THERE IS NO MORE DATA TO BE SENT AND THAT THE COMM ON THIS SIDE IS NO LONGER MASTER OF THE LAN LINE.) KPLMIT ADDS THE MESSAGE TERMINATOR CHARACTER (A CARRIAGE RETURN) AND CAUSES THE MESSAGE TO BE SEND TO THE LAN.

IF THE MESSAGE IS EOT, KPLXMT ALSO CANCELS THE TIMER.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

XMIT-BLOCK = RECRD TIMER-EVENT-BLOCK = RECRD FLAGS = RECRD RCV-BLOCK = RECRD LAN-EVENT-BLOCK = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

CHKSTS - CHKSTS.INC -- CHECK STATUS

XMTBLK - XMTBLK - INCLUDE FILE

TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

COMFLG - COMFLG - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

KLCLRC - CALCULATE LONGITUDINAL REDUNDANCY CHECK

XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER


CNLTIM ERRPRO


CALLED DIRECTLY BY:

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

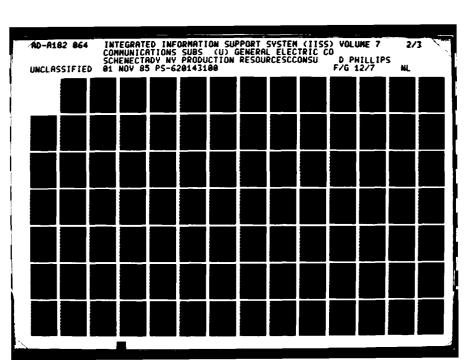

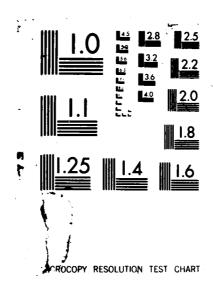

NAME:

LBRESP

PURPOSE:

PROCESS RESPONSE TO LINE BID

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

LBRESP

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- LBRESP WAITS FOR THE RESPONSE TO ITS
LINE BID FROM THE COMM ON THE OTHER COMPUTER.
IF THE RESPONSE IS INCORRECT OR IT IS NOT
RECEIVED WITHIN THE GIVEN TIME INTERVAL, THE
FACT IS REPORTED TO NTM AND THE LINE BID IS
SEND AGAIN. IF THE RESPONSE RECEIVED IS
CORRECT, LBRESP CHANGES THE STATE OF COMM TO
SESSION ACTIVE, LINE ACTIVE AND CAUSES THE
PROCESSING OF MESSAGES WITH DATA TO BEGIN.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)]

TIMER-EVENT-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

NTM-SEND-EVENT-BLOCK-L = DSPLY [X(2032)]

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

INPUT-MAILBOX-NAME = DSPLY [X(14)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]

TARGET-MAILBOX-NAME-L = DSPLY [X(14)]

FLAGS = RECRD

NTM-OUTPUT-BLOCK = RECRD

NTM-INPUT-MSG-POSITION = DSPLY [9(4)] NTM-INPUT-MSG = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE - ERRSTS.INC -- IISS ERROR CODES - CHKSTS.INC -- CHECK STATUS CHKSTS LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK DESCRIPTION NRCVEB - NRCVEB - INCLUDE FILE - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION TIMEVB - NHSNEB - INCLUDE FILE NHSNEB - NLSNEB - INCLUDE FILE NLSNEB - XMTBLK - INCLUDE FILE XMTBLK - RCVBLK - INCLUDE FILE RCVBLK COMFLG - COMFLG - INCLUDE FILE NTMOUB - NTMOUB - INCLUDE FILE - NTMINB - INCLUDE FILE NTMINB - **** PURPOSE NOT FOUND BY STRIPPER **** RPTERR - PROCESS ERROR INCLUDE FILE ERRPRO

ROUTINES CALLED:

--------WAIT02 CNLTIM GETLAN - GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE - RESPOND TO MESSAGE FROM OTHER COMM ALRESP - RECEIVE FROM A LAN TERMINAL LINE RCVLAN - CANCEL A LAN TERMINAL LINE RECEIVE CNLLAN - TRANSMIT A LINE BID MESSAGE LINBID REPTER - REPORT RECOVERABLE ERROR TO NTM ERRPRO

CALLED DIRECTLY BY:

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM
COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME :

LINBID

PURPOSE:

TRANSMIT A LINE BID MESSAGE

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

LINBID

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- LINBID REQUESTS THAT A MESSAGE BE TRANSMITTED TO THE COMM ON THE OTHER SIDE. THE MESSAGE CONTAINS A CODE INDICATING THAT THIS COMM WANTS TO BE MASTER OF THE LINE BECAUSE IT HAS ONE OR MORE BLOCKS OF DATA TO TRANSMIT.

ARGUMENTS:

FLAGS = RECRD XMIT-BLOCK = RECRD RCV-BLOCK = RECRD LAN-EVENT-BLOCK = RECRD TIMER-EVENT-BLOCK = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE CHKSTS - CHKSTS.INC -- CHECK STATUS COMFLG - COMFLG - INCLUDE FILE - XMTBLK - INCLUDE FILE XMTBLK RCVBLK - RCVBLK - INCLUDE FILE - LANEVB. INC -- LAN TERMINAL EVENT BLOCK LANEVB DESCRIPTION - TIMEVE.INC -- TIME EVENT BLOCK DESCRIPTION TIMEVB ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

ERRPRO

CALLED DIRECTLY BY:

IDLINE - PROCESS INPUT OR TIMER RUNOUT LBRESP - PROCESS RESPONSE TO LINE BID

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: PARITY

PURPOSE: SET CHANNEL TO EVEN PARITY

LANGUAGE: VAX-11 FORTRAN

MODULE TYPE: SUBROUTINE

SOURCE FILE: PARITY
SOURCE FILE TYPE: .FOR

HOST: VAX

SUBSYSTEM: COMM SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO SET A CHANNEL TO EVEN PARITY

ARGUMENTS:

CHANNL = I*2

- CHANNEL NUMBER

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO SYS\$QIOW

CALLED DIRECTLY BY:

INITRM - INITIALIZE THE TERMINAL LINE

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

CONVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

NAME: PINPMS

PURPOSE: PROCESS MESSAGE FROM OTHER COMM

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: PINPMS SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- PINPMS CHECKS THE MESSAGE FOR TRANSMISSION ERRORS, VALIDATES THAT THE DATA BLOCK IS THE ONE EXPECTED, AND SENDS THE DATA TO THE NTM MAILBOX. IT ALSO FILLS IN THE RECEIVED SEQUENCE NUMBER IN THE COMM HEADER FOR THE NEXT MESSAGE TO BE TRANSMITTED.

ARGUMENTS:

RCV-BLOCK = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

NTM-SEND-EVENT-BLOCK-L = DSPLY [X(2032)]

TARGET-MAILBOX-NAME-H = DSPLY [X(14)]

TARGET-MAILBOX-NAME-L = DSPLY [X(14)]

FLAGS = RECRD

XMIT-BLOCK = RECRD

NTM-INPUT-MSG-POSITION = DSPLY [9(4)]

NTM-INPUT-MSG = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

CHKSTS - CHKSTS.INC -- CHECK STATUS

TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

RCVBLK - RCVBLK - INCLUDE FILE NHSNEB - NHSNEB - INCLUDE FILE - NLSNEB - INCLUDE FILE NLSNEB - COMFLG - INCLUDE FILE COMFLG XMTBLK - XMTBLK - INCLUDE FILE NTMINB - NTMINB - INCLUDE FILE NTMHDR - NTMHDR - INCLUDE FILE RPTERR - **** PURPOSE NOT FOUND BY STRIPPER **** ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

KLCLRC	- CALCULATE LONGITUDINAL REDUNDANCY CHECK
TRCVH1	- TEST 1ST BYTE IN HEADER OF RECEIVED MSG
KMINDA	- COMPRESS THE DATA IN THE RECEIVE BUFFER
SETTIM	
WAITO1	
UDRSQN	- UPDATE RECEIVE SEQUENCE NUMBER
SNDMSG	

REPTER - REPORT RECOVERABLE ERROR TO NTM ERRPRO

CALLED DIRECTLY BY:

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

COMM Module Documentation

NAME:

POUTMS

PURPOSE:

MOVE DATA FROM NTM MAILBOX TO LAN OUTPUT

BUFFER

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

POUTMS

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- POUTMS FIRST DETERMINES IF THERE IS ANY DATA REMAINING FROM THE LAST MESSAGE RECEIVED FROM NTM TO BE SENT TO COMM ON THE OTHER COMPUTER. IF THERE IS, POUTMS CAUSES IT TO BE CHECKED FOR BINARY OR CONTROL CHARACTERS AND MOVED TO THE BUFFER FOR OUTPUT. IF NO DATA IS LEFT, POUTMS TRIES TO GET THE NEXT MESSAGE FROM NTM. IF THERE IS NO MESSAGE, POUTMS RETURNS TO THE CALLING ROUTINE. IF THERE IS DATA, IT IS CHECKED FOR BINARY OR CONTROL CHARACTERS AND MOVED TO THE BUFFER FOR OUTPUT TO COMM ON ON THE OTHER COMPUTER. IF THE MESSAGE FROM NTM IS A CONTROL MESSAGE TO DEACTIVATE THE SESSION, POUTMS SETS THE FLAG TO INDICATE THAT. ANY OTHER TYPE OF MESSAGE FROM NTM AT THIS TIME IS ILLEGAL.

ARGUMENTS:

NTM-RCV-EVENT-BLOCK = DSPLY [X(2032)] INPUT-MAILBOX-NAME = DSPLY [X(14)]

FLAGS = RECRD

NTM-OUTPUT-BLOCK = RECRD

XMIT-BLOCK = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE
ERRSTS - ERRSTS.INC -- IISS ERROR CODES
CHKSTS - CHKSTS.INC -- CHECK STATUS
NRCVEB - NRCVEB - INCLUDE FILE
COMFLG - COMFLG - INCLUDE FILE
NTMOUB - NTMOUB - INCLUDE FILE NTMHDR - NTMHDR - INCLUDE FILE

XMTBLK - XMTBLK - INCLUDE FILE

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

EXOUDA - EXPAND NTM DATA IF CONTROL CHARS OR BINARY

GOUTMS - GET A MESSAGE FROM NTM

ERRPRO

CALLED DIRECTLY BY:

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

NAME:

PURGE

PURPOSE:

CLEAR THE TYPE AHEAD BUFFER

LANGUAGE:

VAX-11 FORTRAN

MODULE TYPE:

SUBROUTINE

SOURCE FILE: SOURCE FILE TYPE: PURGE . FOR

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

REMOVE ALL CHARACTERS FROM THE TYPE AHEAD BUFFER

ARGUMENTS:

CHANNL = I*2

- CHANNEL NUMBER

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES: _____

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO

SYS\$QIOW

CALLED DIRECTLY BY:

INITRM - INITIALIZE THE TERMINAL LINE

USED IN MAIN PROGRAM(S):

COMVH

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME: PURPOSE: RCV5H LANGUAGE: RECEIVE 5 CURSORS FROM THE IBM MODULE TYPE: VAX-11 FORTRAN SOURCE FILE: SUBROUTINE SOURCE FILE TYPE: RCV5H HOST: . FOR SUBSYSTEM: VAX SUBDIRECTORY: COMM DOCUMENTATION GROUP: COMM DESCRIPTION: TO READ AND DISCARD EXTRANEOUS CHARACTERS FROM PROTOCOL CONVERTERS.

ARGUMENTS:

CHANNL = I*2

- TERMINAL CHANNEL NUMBER RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO

SYSSQIO

CALLED DIRECTLY BY:

- TRANSMIT TO A LAN TERMINAL LINE

USED IN MAIN PROGRAM(S):

NAME:

RCVIBM

PURPOSE:

READ TERMINAL LINE FROM PROTOCOL

CONVERTER

LANGUAGE:

VAX-11 FORTRAN

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

RCVIBM

SOURCE FILE TYPE:

. FOR

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO ISSUE A RECEIVE TO A TERMINAL ON THE LAN

ARGUMENTS:

CHANNL = I*2

- TERMINAL CHANNEL NUMBER

EVTFLG = I*2

- EVENT FLAG

EVTBLK = I*2 (*)

- EVENT BLOCK

RCVBLK = L*1 (*)

- RECEIVE BLOCK

LENGTH = I*2

- RECEIVE BUFFER LENGTH

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO

LIB\$GET EF

SYS\$QIO

SYS\$SETPRI

CALLED DIRECTLY BY:

RCVLAN - RECEIVE FROM A LAN TERMINAL LINE

USED IN MAIN PROGRAM(S):

NAME:

RCVLAN

PURPOSE:

RECEIVE FROM A LAN TERMINAL LINE

LANGUAGE: MODULE TYPE: VAX-11 COBOL

SOURCE FILE:

SUBROUTINE

SOURCE FILE TYPE:

RCVLAN . COB

HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

RECEIVE FROM A TERMINAL LINE AND

CONTINUE PROCESSING. USE AN EVENT FLAG TO ISSUE THE READ.

ARGUMENTS:

RCV-BLOCK = RECRD

EVENT-NUMBER = DSPLY [99]

LAN-EVENT-BLOCK = RECRD

FLAGS = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CHKSTS - CHKSTS.INC -- CHECK STATUS ERRSTS - ERRSTS.INC -- IISS ERROR CODES ERRSTS

- RCVBLK - INCLUDE FILE RCVBLK

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

- COMFLG - INCLUDE FILE COMFLG

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

RCVIBM - READ TERMINAL LINE FROM PROTOCOL CONVERTER **

RCVTRM - READ TERMINAL LINE WITH EVENT FLAG ***
ERRPRO

CALLED DIRECTLY BY:

ALINPS - WAIT FOR INPUT FROM LAN OR TIMER RUNOUT

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

IDLINE - PROCESS INPUT OR TIMER RUNOUT LBRESP - PROCESS RESPONSE TO LINE BID

WIRESP - WAIT FOR THE FIRST MESSAGE ON THE LAN

XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

USED IN MAIN PROGRAM(S):

NAME: RCVTRM

PURPOSE: READ TERMINAL LINE WITH EVENT FLAG

LANGUAGE: VAX-11 FORTRAN

MODULE TYPE: SUBROUTINE

SOURCE FILE: RCVTRM
SOURCE FILE TYPE: .FOR
HOST: VAX
SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO ISSUE A RECEIVE TO A TERMINAL ON THE LAN

ARGUMENTS:

CHANNL = I*2

- TERMINAL CHANNEL NUMBER

EVTFLG = I*2

- EVENT FLAG

EVTBLK = I*2 (*)

- EVENT BLOCK

RCVBLK = L*1 (*)

- RECEIVE BLOCK

LENGTH = I*2

- RECEIVE BUFFER LENGTH

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO LIB\$GET_EF SYS\$QIO

SYS\$SETPRI

CALLED DIRECTLY BY:

RCVLAN - RECEIVE FROM A LAN TERMINAL LINE

USED IN MAIN PROGRAM(S):

NAME:

REPTER

PURPOSE:

REPORT RECOVERABLE ERROR TO NTM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

REPTER

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- REPTER SENDS A RECOVERABLE ERROR CODE TO NTH TO BE RECORDED WITH THE SYSTEM STATISTICS INFORMATION. THE CODES ARE CONCERNED WITH THE INABILITY OF COMM TO TRANSMIT OR RECEIVE MESSAGES ON THE LOCAL AREA NETWORK PORT. REPTER ALSO INCREMENTS THE RETRY COUNT.

ARGUMENTS:

COMM-STATUS = DSPLY [X(5)]

FLAGS = RECRD

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]

TARGET-MAILBOX-NAME-H = DSPLY [X(7)]

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

COMCON - COMCON - INCLUDE FILE

CHKSTS - CHKSTS.INC -- CHECK STATUS

NHSNEB - NHSNEB - INCLUDE FILE COMFLG - COMFLG - INCLUDE FILE

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

SCTLMS - REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM

ERRPRO

CALLED DIRECTLY BY:

ACTSES - ACTIVATE SESSION IF REQUESTED TO BY NTM
ALINPS - WAIT FOR INPUT FROM LAN OR TIMER RUNOUT
ALRESP - RESPOND TO MESSAGE FROM OTHER COMM
LBRESP - PROCESS RESPONSE TO LINE BID
PINPMS - PROCESS MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

NAME:

SCTLMS

PURPOSE:

REPORT RECOVERABLE ERROR OR STATUS MSG TO

NTM

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

SCTLMS

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- SCTLMS SENDS A RECOVERABLE ERROR CODE OR A STATUS MESSAGE TO NTM. NTM RECORDS THE INFORMATION WITH THE SYSTEM STATISTICS.

ARGUMENTS:

NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]
TARGET-MAILBOX-NAME-H = DSPLY [X(14)]
CONTROL-MSG-TYPE = DSPLY [X(2)]
MSG-DATA = DSPLY [X(5)]
FLAGS = RECRD
RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CANHDR - CHKSTS.INC -- CHECK STATUS
CHKSTS - CHKSTS.INC -- CHECK STATUS
NHSNEB - NHSNEB - INCLUDE FILE
COMFLG - COMFLG - INCLUDE FILE
ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

INSTNC

SNDMSG **ERRPRO**

CALLED DIRECTLY BY:

DACSES

- REPORT A SESSION FAILURE TO NTM

REPTER - REPORT RECOVERABLE ERROR TO NTH

WIRESP

- WAIT FOR THE FIRST MESSAGE ON THE LAN

USED IN MAIN PROGRAM(S):

CALLED DIRECTLY BY:

NAME: SETCHR PURPOSE: SET TERMINAL CHARACTERISTICS LANGUAGE: VAX-11 FORTRAN MODULE TYPE: SUBROUTINE SOURCE FILE: SETCHR SOURCE FILE TYPE: . FOR HOST: VAX SUBSYSTEM: COMM SUBDIRECTORY: DOCUMENTATION GROUP: COMM DESCRIPTION: ______ TO SET THE CHARACTERISTICS OF A VAX TERMINAL LINE ARGUMENTS: CHANNL = I*2- CHANNEL NUMBER CHR = I*4- CHARACTERISTIC TO BE SET STATE = I*4- STATE (1 = ON, O = OFF) RSTATS = CHAR - RETURN STATUS INCLUDE FILES: ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER **** ROUTINES CALLED: SYS\$QIOW

INITRM - INITIALIZE THE TERMINAL LINE

USED IN MAIN PROGRAM(S):

NAME:

SETSPD

PURPOSE:

INITIALIZE THE TERMINAL SPEED

LANGUAGE:

VAX-11 FORTRAN

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

SETSPD . FOR

SOURCE FILE TYPE: HOST:

VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO ASSIGN A SPEED TO THE TERMINAL CHANNEL

ARGUMENTS:

CHANNL = I*2

- CHANNEL NUMBER

SPEED = I*4

- CHANNEL SPEED

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED: ______

ERRPRO

SYS\$QIOW

CALLED DIRECTLY BY:

INITRM - INITIALIZE THE TERMINAL LINE

USED IN MAIN PROGRAM(S):

COMM Module Documentation

NAME:

STRTIM

PURPOSE:

SET APPROPRIATE TIME INTERVAL AND START

TIMER

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

STRTIM

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- STRTIM DETERMINES THE TIME INTERVAL BASED ON THE STATE OF COMM. IT THEN INVOKES THE TIMER FOR THAT TIME INTERVAL AND RETURNS TO THE CALLING ROUTINE.

ANY BAD STATUS IN THIS ROUTINE IS FATAL TO COMM.

ARGUMENTS:

TIMER-EVENT-BLOCK = RECRD

FLAGS = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE
CHKSTS - CHKSTS.INC -- CHECK STATUS
COMFLG - COMFLG - INCLUDE FILE

TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

SETTIM

ERRPRO

CALLED DIRECTLY BY:

XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

USED IN MAIN PROGRAM(S):

COMM Module Documentation

NAME:

TRCVH1

PURPOSE:

TEST 1ST BYTE IN HEADER OF RECEIVED MSG

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE: SOURCE FILE TYPE: TRCVH1 . COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- TRCVH1 CHECKS THAT THE FIRST BYTE IN THE HEADER OF THE MESSAGE RECEIVED FROM COMM ON OTHER COMPUTER IS EITHER ZERO OR A SEQUENCE NUMBER INDICATING THE MESSAGE WAS THE FIRST OR THE NEXT ONE IN THE SERIES. IN OTHER WORDS, CRCVH1 CHECKS THAT THE FIRST BYTE CONTAINS THE EXPECTED SEQUENCE NUMBER FOR THE RECEIVED MESSAGE.

ARGUMENTS: _____

RCV-BLOCK = RECRD

RET-STATUS = DSPLY [9(5)]

INCLUDE FILES:

ERRSTS - ERRSTS.INC -- IISS ERROR CODES COMCON - COMCON - INCLUDE FILE

RCVBLK

- RCVBLK - INCLUDE FILE

CALLED DIRECTLY BY:

PINPHS - PROCESS MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

NAME: TRCVH2

PURPOSE: TEST 2ND BYTE IN HEADER OF RECEIVED MSG

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: TRCVH2
SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- TRCVH2 VALIDATES THAT THE SECOND BYTE
IN THE HEADER OF THE MESSAGE RECEIVED FROM
COMM ON THE OTHER COMPUTER IS EITHER ZERO
OR THE EXPECTED SEQUENCE NUMBER. THE SEQUENCE
NUMBER INDICATES IF THE LAST MESSAGE
TRANSMITTED FROM THIS SIDE WAS RECEIVED
CORRECTLY BY THE OTHER SIDE.

ARGUMENTS:

RCV-BLOCK = RECRD

XMIT-BLOCK = RECRD

RET-STATUS = DSPLY [9(5)]

INCLUDE FILES:

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

COMCON - COMCON - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE

CALLED DIRECTLY BY:

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

NAME:

TRMLAN

PURPOSE:

RELEASE THE PORT TO THE LAN

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE: SOURCE FILE TYPE: TRMLAN

HOST:

. COB VAX

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- THE IBM NEEDS A SPECIAL ROUTINE TO REQUEST VTAM TO RELEASE THE PORT. THIS IS A DUMMY ROUTINE ON THE VAX AND LEVEL 6.

ARGUMENTS:

PORT-NAME = DSPLY [X(12)]

RCV BLOCK =

XMIT-BLOCK = RECRD

LAN-EVENT-BLOCK = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

RCVBLK - RCVBLK - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE LANEVB - LANEVB.INC -- LAN TERM - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

CALLED DIRECTLY BY:

COMVH

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMVI

- MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

USED IN MAIN PROGRAM(S):

NAME:

UDRSQN

PURPOSE:

UPDATE RECEIVE SEQUENCE NUMBER

LANGUAGE: VAX-11 COBOL
MODULE TYPE: SUBROUTINE
SOURCE FILE: UDRSQN
SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- UDRSQN INCREMENTS THE RECEIVE SEQUENCE NUMBER. WHEN THE UPPER LIMIT IS REACHED, THE RECEIVE SEQUENCE NUMBER IS RESET TO THE LOWER LIMIT.

ARGUMENTS:

RCV-BLOCK = RECRD

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE RCVBLK - RCVBLK - INCLUDE FILE

CALLED DIRECTLY BY: _____

PINPMS - PROCESS MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

COMM Module Documentation

NAME: UDXSQN

PURPOSE: UPDATE TRANSMIT SEQUENCE NUMBER

LANGUAGE: VAX-11 COBOL MODULE TYPE: SUBROUTINE

SOURCE FILE: UDXSQN SOURCE FILE TYPE: .COB

HOST:

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- UDXSQN INCREMENTS THE TRANSMIT SEQUENCE NUMBER. WHEN THE UPPER LIMIT IS REACHED, THE TRANSMIT SEQUENCE NUMBER IS RESET TO THE LOWER LIMIT.

ARGUMENTS:

XMIT-BLOCK = RECRD

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE XMTBLK - XMTBLK - INCLUDE FILE

CALLED DIRECTLY BY:

ALRESP - RESPOND TO MESSAGE FROM OTHER COMM

USED IN MAIN PROGRAM(S):

NAME:

WIRESP

PURPOSE:

WAIT FOR THE FIRST MESSAGE ON THE LAN

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

WIRESP

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

- WIRESP WAITS FOR EITHER A MESSAGE FROM THE COMM ON THE OTHER COMPUTER OR THE TIMER TO RUN OUT. IF THE TIMER RUNS OUT, NTM IS NOTIFIED THAT COMM COULD NOT START THE SESSION. COMM ALSO NOTIFIES NTM THAT IT FAILED TO START THE SESSION IF THE MESSAGE RECEIVED FROM THE OTHER COMM IS NOT THE ONE EXPECTED. THE ACCEPTABLE MESSAGES ARE LINE CHECK AND AND LINE BID RESPONSE. IF THE MESSAGE FROM THE OTHER COMM IS CORRECT, WIRESP PUTS THIS COMM IN THE SESSION ACTIVE, LINE IDLE STATE. IF THE MESSAGE IS LINE CHECK, WIRESP TRANSMITS A LINE BID RESPONSE MESSAGE.

ANY BAD STATUS CONDITIONS IN THIS ROUTINE ARE FATAL TO COMM.

ARGUMENTS:

LAN-EVENT-BLOCK = RECRD TIMER-EVENT-BLOCK = RECRD NTM-SEND-EVENT-BLOCK-H = DSPLY [X(2032)]RCV-BLOCK = RECRD XMIT-BLOCK = RECRD TARGET-MAILBOX-NAME-H = DSPLY [X(14)]FLAGS = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

CHKSTS - CHKSTS.INC -- CHECK STATUS

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

NHSNEB - NHSNEB - INCLUDE FILE

RCVBLK - RCVBLK - INCLUDE FILE

XMTBLK - XMTBLK - INCLUDE FILE

COMFLG - COMFLG - INCLUDE FILE

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

_	-	-	_	_	_	_	_	-	_	_	_	_	_	-
	W	A	I	T	0	2								

WAITO2
CNLTIM
GETLAN - GET A MESSAGE RECEIVED FROM A LAN TERMINAL LINE
RCVLAN - RECEIVE FROM A LAN TERMINAL LINE
XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER
CNLLAN - CANCEL A LAN TERMINAL LINE RECEIVE
SCTLMS - REPORT RECOVERABLE ERROR OR STATUS MSG TO NTM
ERRPRO

CALLED DIRECTLY BY:

ACTSES - ACTIVATE SESSION IF REQUESTED TO BY NTM

USED IN MAIN PROGRAM(S):

NAME:

XMTLAN

PURPOSE:

TRANSMIT TO A LAN TERMINAL LINE

LANGUAGE:

VAX-11 COBOL

MODULE TYPE:

SUBROUTINE

SOURCE FILE:

XMTLAN

SOURCE FILE TYPE: HOST:

. COB VAX

SUBSYSTEM:

SUBDIRECTORY:

COMM

DOCUMENTATION GROUP: COMM

DESCRIPTION: -----

TRANSMIT TO A TERMINAL LINE AND CONTINUE PROCESSING. ASSUME THE DATA WAS TRANSMITTED OK.

ARGUMENTS:

XMIT-BLOCK = RECRD LAN-EVENT-BLOCK = RECRD FLAGS = RECRD RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

CHKSTS - CHKSTS.INC -- CHECK STATUS ERRSTS - ERRSTS.INC -- IISS ERROR C

ERRSTS - ERRSTS.INC -- IISS ERROR CODES

XMTBLK - XMTBLK - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

COMFLG - COMFLG - INCLUDE FILE

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

XMTTRM - TRANSMIT TO THE TERMINAL LINE RCV5H - RECEIVE 5 CURSORS FROM THE IBM

ERRPRO

CALLED DIRECTLY BY:

XMTMSG - TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

USED IN MAIN PROGRAM(S):

COMM Module Documentation

NAME:

XMTMSG

PURPOSE:

TRANSMIT MESSAGE TO COMM ON OTHER COMPUTER

LANGUAGE:

VAX-11 COBOL

MODULE TYPE: SOURCE FILE:

SUBROUTINE

XMTMSG

SOURCE FILE TYPE:

. COB

HOST:

SUBSYSTEM:

COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION: ______

- XMTMSG GIVES TO THE TRANSMIT PRIMITIVE THE COMPLETED MESSAGE TO BE SENT TO THE COMM ON THE OTHER COMPUTER. IT THEN ISSUES THE RECEIVE FOR THE RETURNING MESSAGE AND IT STARTS A TIMER IN CASE THE RETURNING MESSAGE FAILS TO ARRIVE IN A REASONABLE LENGTH OF TIME.

ANY BAD STATUS IN THIS ROUTINE IS FATAL TO COMM.

ARGUMENTS:

FLAGS - RECRD

XMIT-BLOCK = RECRD

RCV-BLOCK = RECRD

LAN-EVENT-BLOCK = RECRD

TIMER-EVENT-BLOCK = RECRD

RET-STATUS = DSPLY [X(5)]

INCLUDE FILES:

COMCON - COMCON - INCLUDE FILE

CHKSTS - CHKSTS.INC -- CHECK STATUS

- ERRSTS.INC -- IISS ERROR CODES ERRSTS

COMFLG - COMFLG - INCLUDE FILE

- XMTBLK - INCLUDE FILE XMTBLK RCVBLK - RCVBLK - INCLUDE FILE

LANEVB - LANEVB.INC -- LAN TERMINAL EVENT BLOCK

DESCRIPTION

TIMEVB - TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

ERRPRO - PROCESS ERROR INCLUDE FILE

ROUTINES CALLED:

XMTLAN - TRANSMIT TO A LAN TERMINAL LINE

RCVLAN - RECEIVE FROM A LAN TERMINAL LINE STRTIM - SET APPROPRIATE TIME INTERVAL AND START TIMER

ERRPRO

CALLED DIRECTLY BY:

ACTSES - ACTIVATE SESSION IF REQUESTED TO BY NTM

ALINPS - WAIT FOR INPUT FROM LAN OR TIMER RUNOUT

IDLINE - PROCESS INPUT OR TIMER RUNOUT

KPLXMT - PUT FINISHING TOUCHES ON MESSAGE TO LAN

LINBID - TRANSMIT A LINE BID MESSAGE

WIRESP - WAIT FOR THE FIRST MESSAGE ON THE LAN

USED IN MAIN PROGRAM(S):

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

COMM Module Documentation

NAME: XMTTRM

PURPOSE: TRANSMIT TO THE TERMINAL LINE

LANGUAGE: VAX-11 FORTRAN

MODULE TYPE: SUBROUTINE

SOURCE FILE: XMTTRM SOURCE FILE TYPE: .FOR WAX

SUBSYSTEM: COMM

SUBDIRECTORY:

DOCUMENTATION GROUP: COMM

DESCRIPTION:

TO TRANSMIT TO A TERMINAL ON THE LAN

ARGUMENTS:

CHANNL = I*2

- TERMINAL CHANNEL NUMBER

XMTBLK = L*1 (*)

- TRANSMIT BLOCK

LENGTH = I*2

- BUFFER LENGTH

RSTATS = CHAR

- RETURN STATUS

INCLUDE FILES:

ERRSTS.INF - **** PURPOSE NOT FOUND BY STRIPPER ****

ROUTINES CALLED:

ERRPRO SYS\$QIOW SYS\$SETPRI

CALLED DIRECTLY BY:

XMTLAN - TRANSMIT TO A LAN TERMINAL LINE

USED IN MAIN PROGRAM(S):

AND DESCRIPTION OF THE PROPERTY OF THE SECONDARY

COMVH - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM COMVI - MAIN MODULE FOR COMMUNICATIONS SUBSYSTEM

3.10.9 Include File Descriptions

The following list contains a purpose and description of each include file listed in 3.10.4 as specified in the source code. The language it is written in is also given.

COMM Include File Description

FILE NAME: ASCII

PURPOSE: ASCII- INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - THIS IS THE TABLE USED TO IDENTIFY THE

VALID SET OF ASCII CHARACTERS.

A NEGATIVE ENTRY INDICATES A CONTROL CHARACTER SUBSTITUTION (JUST NEGATE), A POSITIVE VALUE YIELDS THE VALID CHARACTER AND A ZERO ENTRY MEANS AN

INVALID CHARACTER.

COMM Include File Description

FILE NAME: CANHDR

PURPOSE: CHKSTS.INC -- CHECK STATUS LANGUAGE: VAX-11 COBOL

DESCRIPTION:

CATALOGUE CONTRACTOR DESCRIPTION OF THE PROPERTY OF THE PROPER

COMM Include File Description

FILE NAME: CHKSTS

PURPOSE: CHKSTS.INC -- CHECK STATUS LANGUAGE: VAX-11 COBOL

DESCRIPTION: -----

COLLEGATION CONTINUES CON

COMM Include File Description

FILE NAME: CONCON

PURPOSE: COMCON - INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - COMCON IS AN INCLUDE FILE THAT DESCRIBES

THE CONSTANTS USED IN THE COMM SUBSYSTEM.

EVENT NUMBERS

COMM Include File Description

FILE NAME: COMFLG

PURPOSE: COMFLG - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - COMFLG IS AN INCLUDE FILE THAT DESCRIBES

THE STORAGE FOR THE FLAGS BLOCK.

COMM Include File Description

FILE NAME: CTLASC

PURPOSE: CTLASC - INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - THIS TABLE IS USED BY KMINDA TO

SUBSTITUTE THE CORRECT CONTROL CHARACTER FOR THE CHARACTER FOUND

IN THE MESSAGE.

THIS TABLE IS COMPILED WITH THE ASCII

VERSIONS OF COMM (NOT FOR IBM).

COMM Include File Description

FILE NAME: ERRPRO

PURPOSE: PROCESS ERROR INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

COMM Include File Description

FILE NAME: ERRSTS

PURPOSE: ERRSTS.INC -- IISS ERROR CODES

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

THIS FILE CONTAINS ALL IISS ERROR CODES DEFINED IN

COBOL FORMAT

COMM Include File Description

FILE NAME: LANEVB

PURPOSE: LANEVB.INC -- LAN TERMINAL EVENT BLOCK DESCRIPTION LANGUAGE: VAX-11 COBOL

DESCRIPTION:

2013333 2211524 Exercise

COMM Include File Description

FILE NAME: NHSNEB

PURPOSE: NHSNEB - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - DESCRIBES THE EVENT BLOCK USED TO SEND

MESSAGES TO THE HIGH PRIORITY NTM QUEUE.

COMM Include File Description

FILE NAME: NLSNEB

PURPOSE: NLSNEB - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - DESCRIBES THE EVENT BLOCK USED TO SEND

MESSAGES TO THE LOW PRIORITY NTM QUEUE.

COMM Include File Description

FILE NAME: NRCVEB

PURPOSE: NRCVEB - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - NRCVEB IS AN INCLUDE FILE THAT DESCRIBES THE EVENT BLOCK USED TO RECEIVE

MESSAGES FROM THE NTM.

COMM Include File Description

FILE NAME: NTMHDR

PURPOSE: NTMHDR - INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - THIS FILE DESCRIBES THE NTM MESSAGE FOR

THE PURPOSES OF THE COMM INTERFACE.
IT IS ALWAYS REFERENCED DIRECTLY AFTER

THE NTM OUTPUT BLOCK (NTMOUB.INC).

COMM Include File Description

FILE NAME: NTMINB

PURPOSE: NTMINE - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - NTMINB IS AN INCLUDE FILE THAT DESCRIBES

THE "TO NTM" VARIABLES.

COMM Include File Description

FILE NAME: NTMOUB

PURPOSE: NTHOUB - INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - NTHOUB IS AN INCLUDE FILE THAT DESCRIBES

THE NTH-OUTPUT-BLOCK.

COMM Include File Description

FILE NAME: RCVBLK

PURPOSE: RCVBLK - INCLUDE FILE

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

DESCRIPTION: - RCVBLK IS AN INCLUDE FILE THAT DESCRIBES

THE CONTENTS OF THE RCV-BLOCK.

COMM Include File Description

FILE NAME: TIMEVB

PURPOSE: TIMEVB.INC -- TIME EVENT BLOCK DESCRIPTION

LANGUAGE: VAX-11 COBOL

DESCRIPTION:

COMM Include File Description

FILE NAME: XMTBLK

PURPOSE: XMTBLK - INCLUDE FILE LANGUAGE: VAX-11 COBOL

DESCRIPTION:


DESCRIPTION: - XMTBLK IS AN INCLUDE FILE THAT DESCRIBES


THE CONTENTS OF THE XMIT-BLOCK.

3.10.10 Hierarchy Chart

The following hierarchy charts show the relationships between all of the modules mentioned in the above documentation. A module may call a subroutine several times within its code, but the call will only be shown once as a single relationship on this hierarchy chart. All modules shown at the top of the first page are considered Main Programs as described in section 3.10.1 above.

There is an internal paging scheme as marked by the numbers in the upper right corner of each page. An index after the last page of the chart shows where a routine and its calls are first defined. If a routine has no page reference, it either makes no calls or is an external routine. A continuation box on the end of a tree limb shows where that the tree continues on the page numbered mentioned. A number in a box with a routine name points to the page where the routine is further defined within the hierarchy tree. If there is no number in a box, the routine either makes no calls or is an external routine.

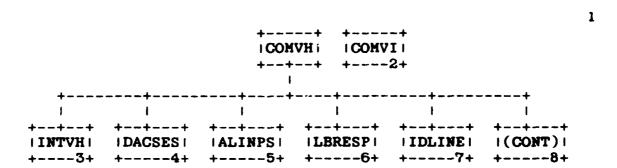


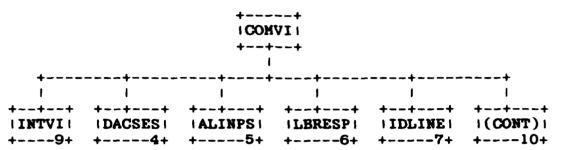


3 INTVH +--+--+ +--+--+ |INICOM| |RCVMSG| +--+--+ | INILAN | | ERRPRO | +----+ +----+ +--+--+ INITRH t I +--+--+ +--+--+ +--+--+ +--+--+ +--+--+ | ERRPRO | | PARITY | | PURGE | | SETCHE | | SETSPD| |(CONT)| +----+ +----11+ +---12+ +--+---+ +--+--+ +----15+ +--+--+ +--+-+ +---+ ISYS\$QIOW: | ERRPRO: | ISYS\$QIOW: **+----+ +----+**

<u>ዸዸዸፙኯ፟ፙዀዸቔቑኯ፟ዀዀዀዾዺቔኯዀጚዹጚዿዀዀጚጜዄዀዀዀዀኯኯቚዹጜዹጟቜ</u>

4

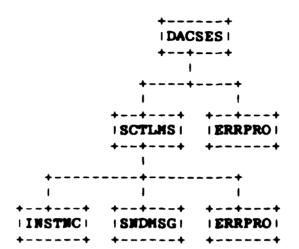

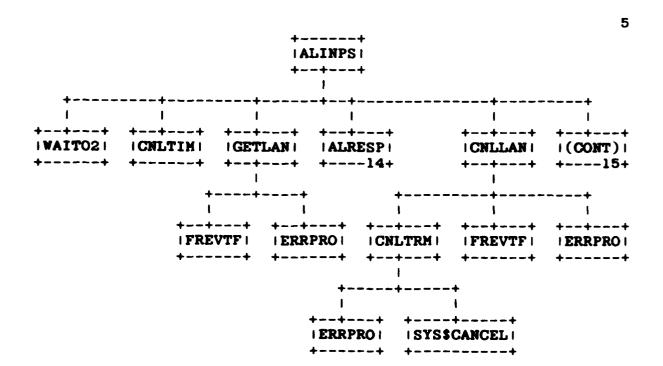


| +----+ | IDLINE| | +--+--+ | | | | | | | | | | +--+--+ +----+ +-----+ +-----+ | | | | | | | | | | | +--+--+ +----+ +-----+ +-----+ | CNLLAN| | DACSES| | WAITO3| | GETLAN| | XMTMSG| | (CONT)| | +----5+ +----4+ +-----+ +----5+ +----25+ +----17+

8


+---+ I COMVH I +--+--+ +--+--+ +--+--+ +--+--+ | (CONT) | | ACTSES | | DELMBX | | RELEVB | |TRMLAN| |(CONT)| +----+


9


3-159

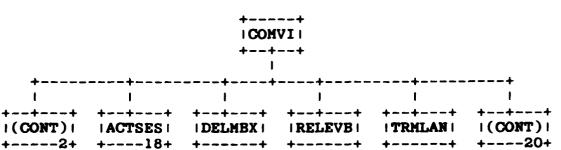

11

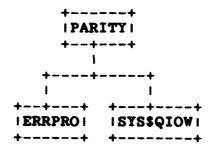

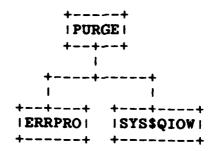


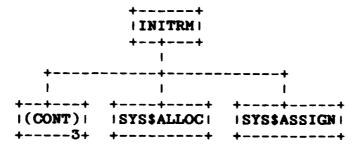


14 +----+ IALRESPI +--+--+ +--+--+ RCVLAN |TRCVH2| |PINPMS| |POUTMS| UDXSQNI I (CONT) +---24+ +---22+ +---21+ I EXOUDA I | GOUTHS | | ERRPRO | +---17+ +--+--+ | ERRPRO | +----+


+----+


3-165

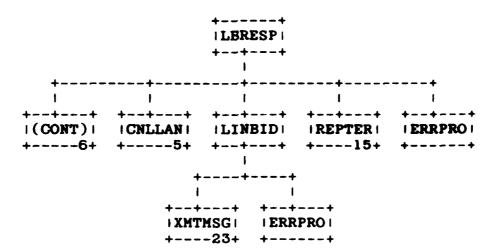


3-167

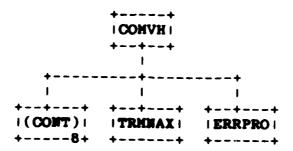

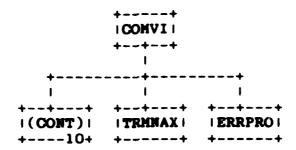


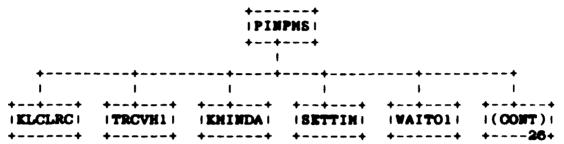



22

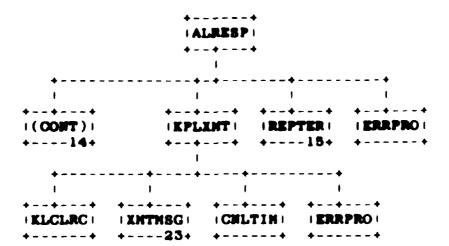



3-172

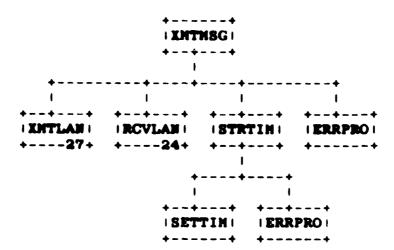


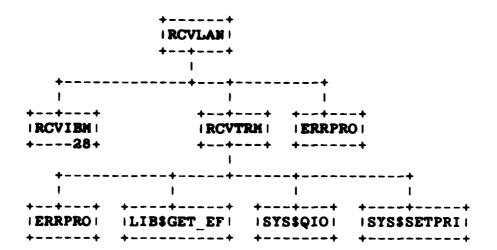

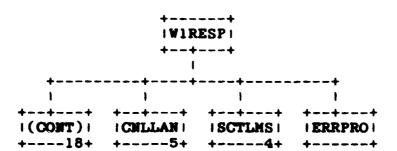

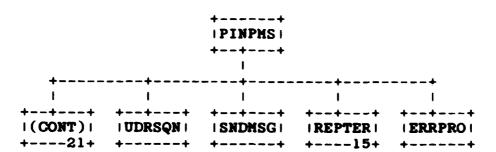

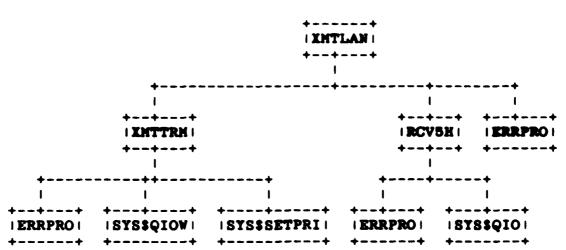


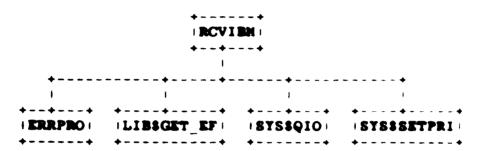

ACTSES 18	SYS\$ASSIGN
ALIMPS 5	SYS\$CANCEL
ALRESP 14	SYS\$QIO
CNLLAN5	SYS\$QIOW
CNLTIM	_ •
CNLTRH5	SYS\$SETPRI
	TRCVH1
COMVH1	TRCVH2
COMVI2	TRMLAN
DACSES 4	TRMNAX
DELMBX	UDRSON
ERRPRO	UDXSQN
EXOUDA14	W1RESP18
FREVTF	
GETLAN5	WAITO1
-	WAITO2
GETHSG	WAITO3
GOUTHS17	XMTLAN 27
IDLINE7	XMTMSG23
INICOM	XMTTRM27
INILAN3	
INITRM3	
INSTNC	
INTVH3	
INTVI	
KLCLRC	
KMINDA	
KPLXMT 22	
LBRESP6	
LIB\$GET_EF	
LINBID16	
PARITY11	
PINPMS21	
POUTMS14	
PURGE 12	
RCV5H27	
RCVIBM28	
RCVLAN 24	
RCVMSG	
RCVTRM24	
RELEVB	
REPTER15	
SCTLMS4	
SETCHR3	
SETSPD3	
SETTIM	
SNDMSG	
STRTIM23	
SYS\$ALLOC	
PISAURINO	

MD-A182 064 INTEGRATED INFORMATION SUPPORT SYSTEM (IISS) VOLUME 7 3/3
COMMUNICATIONS SUBS (U) GENERAL ELECTRIC CO
SCHENECTADY NY PRODUCTION RESOURCESCONSU D PHILLIPS
UNCLASSIFIED 01 NOV 85 PS-620143100 F/G 12/7 NL

END
8 87

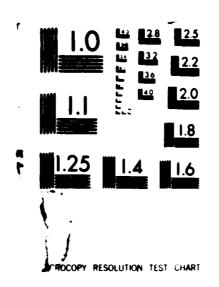

3.11 Program Listings Comments

This information is contained in the Module Descriptions in section 3.10.

SECTION 4

QUALITY ASSURANCE PROVISIONS

4.1 Introduction and Definitions

"Testing" is a systematic process that may be preplanned and explicitly stated. Test techniques and procedures may be defined in advance, and a sequence of test steps may be specified. "Debugging" is the process of isolation and correction of the cause of an error.

"Antibugging" is defined as the philosophy of writing programs in such a way as to make bugs less likely to occur and when they do occur, to make them more noticeable to the programmer and the user. In other words, as much error checking as is practical and possible in each routine should be performed.

4.2 Computer Programming Test and Evaluation

The quality assurance provisions for test consists of the normal testing techniques that are accomplished during the construction process. They consist of design and code walk-throughs, unit testing, and integration testing. These tests are performed by the design team. Structured design, design walk-through and the incorporation of "antibugging" facilitate this testing by exposing and addressing problem areas before they become coded "bugs."